

# COATS®

## Wheel Balancer Models 1400 2D, 1500 3D, 1600 3D



Model 1400 Shown



Model 1500 Shown



Model 1600 Shown

See  
★ **Balancing Your  
First Tire**  
on page 7.

### **Safety Instructions Set Up Instructions Operation Instructions Maintenance Instructions**

READ these instructions before placing unit in service. KEEP these and other materials delivered with the unit in a binder near the machine for ease of reference by supervisors and operators.

**HENNESSY**  
INDUSTRIES



## **NOTICE**

**Read entire manual before assembling, installing, operating, or servicing this equipment.**

## Table of Contents

<b>Important Safety Instructions .....</b>	<b>1</b>	Hood (Wheel Guard) .....	23
Owner's Responsibility .....	1	Auto Wheel Positioning (if equipped) .....	23
Operator Protective Equipment .....	1	Display Mount .....	24
Definitions of Hazard Levels .....	1	Control Panel (if equipped) .....	24
Safety Notices and Decals .....	2	Touchscreen (if equipped) .....	24
Standard Safety Devices .....	3	<b>Mounting Wheel On Balancer Shaft .....</b>	<b>25</b>
Label Locations .....	4	Standard Back Cone/Collet Mounting .....	25
<b>Specifications .....</b>	<b>5</b>	Optional Front Cone/Collet Mounting .....	26
<b>Features .....</b>	<b>5</b>	Alternate Mounting .....	26
<b>Standard Accessories .....</b>	<b>5</b>	<b>Pedal-Assisted Wheel Mounting (1600 only) .....</b>	<b>27</b>
<b>Set Up Instructions .....</b>	<b>6</b>	Mounting Wheel .....	27
Receiving .....	6	Dismounting Wheel .....	28
Electrical Requirements .....	6	Auto-Index Feature .....	28
Machine Set Up .....	6	<b>Direct Select™</b>	
Floor and Space Requirements .....	6	<b>Weight Placement Location .....</b>	<b>29</b>
Connect to Power .....	6	Weight Placement Options .....	29
<b>Balancing Your First Tire .....</b>	<b>7</b>	Direct Select™ Control Panel Models .....	29
<b>Principle Operating Parts .....</b>	<b>8</b>	Direct Select™ Touchscreen Models .....	29
Know Your Unit .....	8	<b>Setting Wheel Dimensions (DIM) .....</b>	<b>30</b>
<b>Control Panel Model Layout .....</b>	<b>10</b>	Definition of Dimensions (DIM) .....	30
Control Panel Function and Review .....	10	Basic Wheel Data Entry .....	30
<b>Touchscreen Model Layout .....</b>	<b>12</b>	Entering Wheel Dimensions Manually .....	31
Touchscreen Function and Review .....	12	<b>Balancing A Wheel</b>	
<b>Owner Settings Menu .....</b>	<b>16</b>	<b>Using Direct Select™ .....</b>	<b>31</b>
Information / Instructions Window .....	16	Dynamic Balancing .....	31
ProBalance Settings .....	16	Static Balancing .....	32
Language Settings - if equipped .....	16	Patch Weight Balance .....	32
Maintenance Monitoring - if equipped .....	16	<b>Corrective Weight Placement .....</b>	<b>33</b>
Hood Settings .....	17	Behind Spoke Mode .....	33
Sonar Settings .....	17	<b>LED Bar &amp; Switch Operation .....</b>	<b>34</b>
Foot Pedal Diagnostics .....	17	<b>Hood Damper .....</b>	<b>35</b>
Assisted Mounting/Dismounting Speeds .....	17	<b>ProBalance Technology™</b>	
Foot Pedal Settings .....	17	<b>On Touchscreen Models .....</b>	<b>36</b>
Alternate Language .....	17	<b>Match Balance (Optimization)</b>	
Power Switch .....	18	<b>- If Equipped .....</b>	<b>37</b>
Weight Tray .....	18	Match Balance Mode .....	37
Using The Offset Arm .....	18	<b>Calibration .....</b>	<b>38</b>
Using The Laser Locator .....	20	Machine Calibration .....	38
Using The Line Laser .....	20	<b>Maintenance Instructions .....</b>	<b>39</b>
Laser Guided Operation™ System .....	21	<b>Diagnostic Procedures .....</b>	<b>41</b>
Using the Hood Sonar		After Balance Vibration Problems .....	41
(Width Sensor - if equipped) .....	23	Troubleshooting .....	41
		<b>Maintenance Interval Monitor .....</b>	<b>43</b>

## IMPORTANT SAFETY INSTRUCTIONS

### READ ALL INSTRUCTIONS

1. Eye and face protection requirements:  
“Protective eye and face equipment is required to be used where there is a reasonable probability of injury that can be prevented by the use of such equipment.” O.S.H.A. 1910.133(a) Protective goggles, safety glasses, or a face shield must be provided by the owner and worn by the operator of the equipment. Care should be taken to see that all eye and face safety precautions are followed by the operator. ALWAYS WEAR SAFETY GLASSES. Everyday glasses only have impact resistant lenses, they are not safety glasses.
2. Do not disable hood safety interlock system, or in any way shortcut safety controls and operations.
3. Be sure that wheels are mounted properly, the hub nut engages the arbor for not less than four (4) turns, and the hub nut is firmly tightened before spinning the wheel.
4. Read and understand this manual before operating. Abuse and misuse will shorten the functional life.
5. Be sure the balancer is properly connected to the power supply and electrically grounded.
6. Do not operate equipment with a damaged cord or if the equipment has been dropped or damaged – until it has been examined and repaired by a qualified serviceman.
7. Do not let cord hang over edge of table, bench, or counter or come in contact with hot manifolds or moving fan blades.
8. If an extension cord is necessary, a cord with a current rating equal to or more than that of the equipment should be used. Cords rated for less current than the equipment may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
9. Keep guards and safety features in place and in working order.
10. Wear proper clothing. Safety toe, non-slip footwear and protective hair covering to contain hair is recommended. Do not wear jewelry, loose clothing, neckties, or gloves when operating the balancer.
11. Keep work area clean and well lighted. Cluttered and/or dark areas invite accidents.
12. Avoid dangerous environments. Do not use power tools or electrical equipment in damp or wet locations, or expose them to rain.
13. Avoid unintentional starting. Be sure the balancer is turned OFF and power disconnected before servicing.
14. Disconnect the balancer before servicing.
15. Use only manufacturer's recommended accessories. Improper accessories may result in personal injury or property damage.
16. Repair or replace any part that is damaged or worn and that may cause unsafe balancer operation. Do not operate damaged equipment until it has been examined and serviced by an authorized service technician only. This unit contain no user serviceable parts.
17. Never overload or stand on the weight tray or any part of the balancer.
18. Do not allow untrained persons to operate machinery.
19. To reduce the risk of fire, do not operate equipment in the vicinity of open containers or flammable liquids (gasoline).
20. Adequate ventilation should be provided when working on or operating internal combustion engines.
21. Keep hair, loose clothing, fingers, and all parts of body away from moving parts.
22. Use equipment only as described in this manual. Do not modify the unit or remove protective covers or housings.
23. Use only manufacturer's recommended attachments and accessories.
24. The laser unit is not to be opened [except for battery change (where applicable) or modified by the customer, nor is it allowed to attempt to cheat or defeat safety interlocks (where applicable)]. Never operate the laser if defective or cover/seal is defective.
25. Do not point laser or allow laser light to be directed or reflected toward other people or reflective objects. Potential eye or skin exposure to laser radiation exists if these instruction are not followed.

### SAVE THESE INSTRUCTIONS

## Important Safety Instructions

### Owner's Responsibility

To maintain machine and user safety, the responsibility of the owner is to read and follow these instructions:

- Follow all installation instructions.
- Make sure installation conforms to all applicable Local, State, and Federal Codes, Rules, and Regulations; such as State and Federal OSHA Regulations and Electrical Codes.
- Carefully check the unit for correct initial function.
- Read and follow the safety instructions. Keep them readily available for machine operators.
- Make certain all operators are properly trained, know how to safely and correctly operate the unit, and are properly supervised.
- Allow unit operation only with all parts in place and operating safely.
- Carefully inspect the unit on a regular basis and perform all maintenance as required.
- Service and maintain the unit only with authorized or approved replacement parts.
- Keep all instructions permanently with the unit and all decals/labels/notices on the unit clean and visible.
- Do not override safety features.

### Operator Protective Equipment

Personal protective equipment helps make tire servicing safer. However, equipment does not take the place of safe operating practices. Always wear durable work clothing during tire service activity. Loose fitting clothing should be avoided. Tight fitting leather gloves are recommended to protect operator's hands when handling worn tires and wheels. Sturdy leather work shoes with steel toes and oil resistant soles should be used by tire service personnel to help prevent injury in typical shop activities. Eye protection is essential during tire service activity. Safety glasses with side shields, goggles, or face shields are acceptable. Back belts provide support during lifting activities and are also helpful in providing operator protection. Consideration should also be given to the use of hearing protection if tire service activity is performed in an enclosed area, or if noise levels are high.

## Definitions of Hazard Levels

Identify the hazard levels used in this manual with the following definitions and signal words:

### DANGER

Watch for this symbol:



It Means: Immediate hazards, which will result in severe personal injury or death.

### WARNING

Watch for this symbol:



It Means: Hazards or unsafe practices, which could result in severe personal injury or death.

### CAUTION

Watch for this symbol:



It Means: Hazards or unsafe practices, which may result in minor personal injury or product or property damage.



Watch for this symbol! It means BE ALERT! Your safety, or the safety of others, is involved!

## Safety Notices and Decals




Failure to follow danger, warning, and caution instructions may lead to serious personal injury or death to operator or bystander or damage to property. Do not operate this machine until you read and understand all the dangers, warnings and cautions in this manual. For additional copies of either, or further information, contact:

### Hennessy Industries LLC

1601 JP Hennessy Drive  
LaVergne, TN 37086  
(615) 641-7533 or (800) 688-6359  
[www.hennessyind.com](http://www.hennessyind.com)

Electric Shock Label

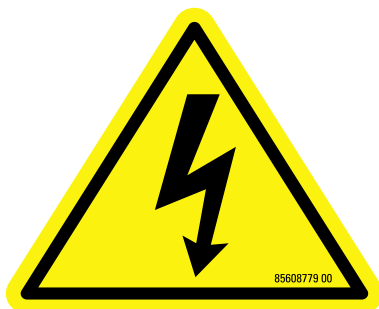

Laser Hazard Label



The motor unit of this machine contains a Class 2 laser with a maximum output less than <1mW at a wave length of 635-660 nm.

Explanatory Label



Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


In case of failure, the entire motor unit must be replaced.

Certification Label

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

85610749 00

Sample Manufacturing I.D. Label

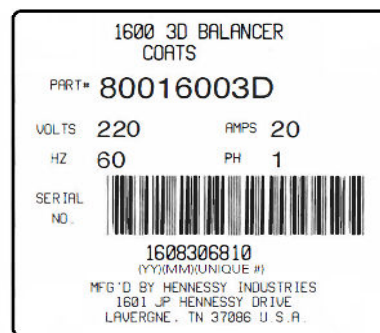

MET Lab Compliance Label



\* Does not apply to Australian models.





<b>⚠ WARNING</b>	<b>⚠ AVERTISSEMENT</b>
<b>RISK OF EXPLOSION</b> This equipment has internal arcing or sparking parts which should not be exposed to flammable vapors. Do not locate in a recessed area or below floor level. <b>THIS EQUIPMENT MUST BE EARTH-GROUNDED</b> The earth-ground connector built into the power cord provides protection to reduce the risk of electrical shock.	<b>RISQUE D'EXPLOSION</b> Cet équipement possède des pièces internes, pouvant lancer des arcs ou jeter des étincelles, et qui ne devraient pas être exposées à des vapeurs inflammables. Ne situez pas l'équipement dans des endroits encastrés ou en-dessous du niveau du plancher. <b>CET ÉQUIPEMENT DOIT ÊTRE MIS À LA TERRE</b> Le raccord de mise à la terre incorporé dans le cordon de puissance fournit une protection afin de réduire le risque d'électrocution.
<b>⚠ CAUTION</b>	<b>⚠ ATTENTION</b>
Do not use below garage floor or grade level. Disconnect power before servicing this equipment. To prevent electrical shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.	N'utilisez pas en-dessous du plancher du garage ou du palier. Débranchez le cordon de puissance avant de faire l'entretien de cet équipement. Afin de vous protéger contre l'électrocution, n'enlevez pas le couvercle. Aucune pièce interne ne nécessite d'entretien par l'utilisateur. Référez l'entretien à un personnel de service qualifié.

8113927 05

**⚠ WARNING**

**Maximum Size of Wheel Rating**

Weight	Diameter	Width
90 lbs./40 kg	42 in./107 cm	19 in./48cm

Maximum Duty Cycle

**30 Wheels/Hour @ 90 lbs./40 kg**

85610497 00

*Australian Models Only*

**Pedal Ops Label (1600 Only - if equipped)**

<b>⚠ CAUTION</b>	<b>⚠ ATTENTION</b>
Pressing Pedal Rotates Shaft. Avoid Pinch Points During Rotation.	Pour faire tourner le arbre appuyer sur la pédale. Éviter les points de pincement durant la rotation.
<b>INSTALL</b> ←	<b>REMOVE</b> →

85611015 00

## Standard Safety Devices

- STOP key for stopping the wheel under emergency conditions.
- A hood guard of high impact plastic that is designed to prevent the counterweights from flying out in any direction except towards the floor.
- A hood switch interlock system that prevents the machine from starting if the guard is not lowered and stops the wheel whenever the guard is raised.


**Pinch Point Label (1600 Only - if equipped)**

**⚠ CAUTION**

**Pressing Pedal Rotates Shaft. Avoid Pinch Points During Rotation.**

**⚠ ATTENTION**

Pour faire tourner le arbre appuyer sur la pédale. Éviter les points de pincement durant la rotation.

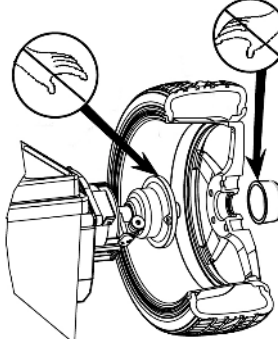


85611016 00

<b>⚠ WARNING</b>	<b>⚠ AVERTISSEMENT</b>												
<b>Maximum Size of Wheel Rating</b> <table style="width: 100%; text-align: center;"> <tr> <td>Weight</td> <td>Diameter</td> <td>Width</td> </tr> <tr> <td>160 lbs.</td> <td>44 in.</td> <td>20 in.</td> </tr> </table> <b>Maximum Duty Cycle</b> <b>30 Wheels/Hour @ 160 lbs.</b>	Weight	Diameter	Width	160 lbs.	44 in.	20 in.	<b>Capacité de la Dimension Maximale de la Roue</b> <table style="width: 100%; text-align: center;"> <tr> <td>Poids</td> <td>Diamètre</td> <td>Largeur</td> </tr> <tr> <td>73Kg</td> <td>111,8cm</td> <td>50,8cm</td> </tr> </table> <b>Cycle de Service Maximum</b> <b>30 Roues/Heure @ 73Kg</b>	Poids	Diamètre	Largeur	73Kg	111,8cm	50,8cm
Weight	Diameter	Width											
160 lbs.	44 in.	20 in.											
Poids	Diamètre	Largeur											
73Kg	111,8cm	50,8cm											

85610679 00

## Label Locations

Part Number	Description
8113927	Caution / Warning
8120446	Motor Rotation
85010088	MET Lab Compliance
85608653	Patent Notice
85608779	Electric Shock
85610662	Main, 1400/1500/1600
85610679	Warning
85610721	Nameplate-1600
85610729	Nameplate-1500
85610730	Nameplate-1400
85610746	Laser Hazard
85610747	Explanatory
85610749	Certification
85611015	Pedal Ops
	(1600 Only - if equipped)
85611259	Reverse Pedal
	(1600 Only - if equipped)
85611016	Caution, Pinch Point
	(1600 Only - if equipped)
85611166	Clean, Screen
85611757	1400,1500,1600 QR Code

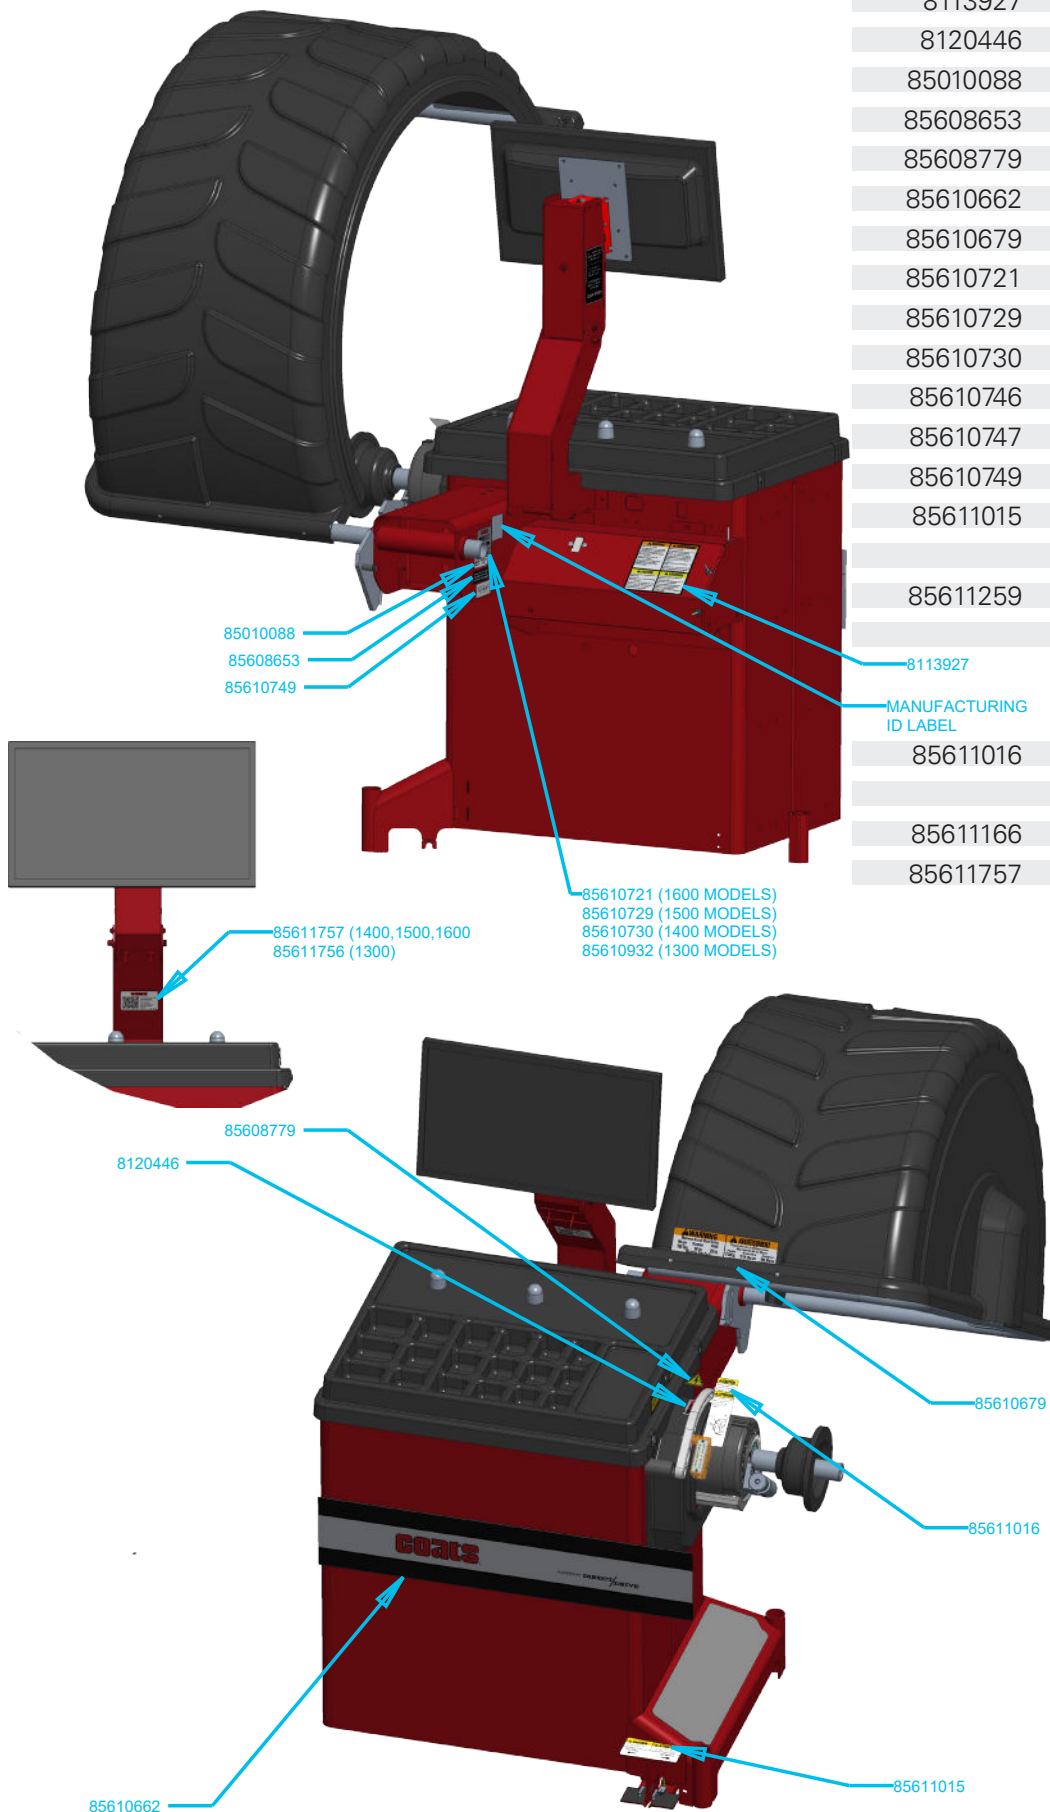



## Specifications

### Wheel Diameter Range

8 - 30 inches (203 - 762 mm)

### Wheel Width Range

2 - 20 inches (51 - 508 mm)

### Maximum Outside Tire Diameter

Up to 44 inches (1118 mm)

### Maximum Tire/Wheel Weight

160 pounds (73 Kg)

90 pounds (40 Kg) - Australia Only

### Mounting Shaft Diameter

40 mm

### Resolution (Round Off Mode)

0.25 ounce (7 grams), position 1.40 degrees

### Resolution (Fine Mode)

0.01 ounce (.3 grams), position 1.40 degrees

### Balancing Display Increments

0.25 or 0.01 ounces (7 or .3 grams)

### Electrical Requirements

230V, 60 Hz, 20A, 1 ph.

NEMA L6-20R

230V, 60 Hz, 20A, 3 ph.

NEMA L15-20R

(use grounding type plug)

240V, 50 Hz, 10A, 1 ph.

(Australia Only)

### Footprint

Width: 57 inches (1448 mm)

Depth: 55 inches (1397 mm)

Height: 75 inches (1905 mm)

### Shipping Weight

650 pounds (295 Kg)

(without accessories)

## Features

- Direct Drive System
- Simple, Interactive User Interface - Touchscreen
- Operator Memory for Two Different Users
- Direct Select™ Weight Placement
- Static, Dynamic And Multiple Tape-A-Weight
- Automatic Data Entry for Offset, Diameter & Width - Manual Entry Backup on all Parameters
- Automatic Start When Hood Is Lowered
- Hood Safety Interlock System
- Auto Wheel Positioning
- Behind the Spoke Weight Placement
- ProBalance Technology™ (certain models)
- Laser Guided Operation™ System
- 12 O'clock Laser (certain models)
- MET Lab Listing (Exc. Australia)
- LED Bar for under hood illumination
- Damper to slow Hood decent (1600)
- Pedal-Assisted Wheel Mounting (1600)
- Capacitive Touch Display (1600)
- Spin Count Monitor (1600)

## Standard Accessories

Part Number	Description
8500920401	Mounting Shaft
85608850	Weight Tray Stud (3 included)
85609499	8 Double Sided Collets
8309011	Calipers
5113175	Premium Wheel Weight Hammer
85607503	Premium Quick Nut
8112106	Small Pressure Cup & Rubber Lip
85608312	No Mar Ring
8112107	Spring
8113390	Scraper
85610715	Shadow Board

## Set Up Instructions

### Receiving

The shipment should be thoroughly inspected as soon as it is received. The signed bill of lading is acknowledgement, for the carrier, of receipt in good condition of the shipment covered by our invoice.

If any of the goods called for on this bill of lading are shorted or damaged, do not accept them until the carrier makes a notation of the shorted or damaged goods on the freight bill. Do this for your own protection.

NOTIFY THE CARRIER AT ONCE if any hidden loss or damage is discovered after receipt and request him to make an inspection. If the carrier will not do so, prepare an affidavit to the effect that you have so notified the carrier (on a certain date) and that he has failed to comply with your request.

IT IS DIFFICULT TO COLLECT FOR LOSS OR DAMAGE AFTER YOU HAVE GIVEN THE CARRIER A CLEAR RECEIPT.

File your claim with the carrier promptly. Support your claim with copies of the bill of lading, freight bill, invoice, and photographs, if possible.

Although COATS® responsibility ceases upon delivery of the shipment to the carrier, we will gladly assist in tracing lost shipments. Our willingness to assist in every possible manner does not make COATS responsible for collection of claims, or replacement of lost or damaged materials.

### Electrical Requirements

See serial tag for the appropriate power requirements of your machine.

Always have a qualified electrician install the proper receptacles in accordance with state and local codes.

### Machine Set Up



**Do not use the display, faceplate, hood or mounting shaft to lift the balancer. Use help to remove the balancer from the pallet. The unit is heavy and the weight is not evenly distributed. Dropping the unit may cause personal injury or equipment damage.**



**Do not attempt to install and set up the unit yourself. Contact COATS as noted below.**

A factory trained COATS Service Technician must perform the install, set up, and initial test procedures on your wheel balancer. Do not attempt to install and set up the unit yourself. Accurate and reliable operation of your unit depends on proper installation. Please contact COATS directly at 1-800-688-9240 for the Certified Service Partner nearest you.

### Floor and Space Requirements

The balancer must be located on a flat floor of solid construction, preferably concrete. The balancer must sit solidly on its three feet. If the balancer is not level, does not sit solidly on its three feet, or is placed on an unstable floor, the balancer will not function properly and may produce inaccurate balance readings.

**Do not** operate the balancer while it is **on the pallet**.

Take **special care** when lifting balancer from the pallet if equipped with **Pedal-Assist** Wheel Mounting.

Select a location for the balancer that provides a level, solid floor, and adequate clearance around and above the balancer. Make sure the location selected has enough room above and behind the unit so the hood can be raised completely. The location must also provide working room for mounting and removing wheels. Make sure the area has adequate lighting.

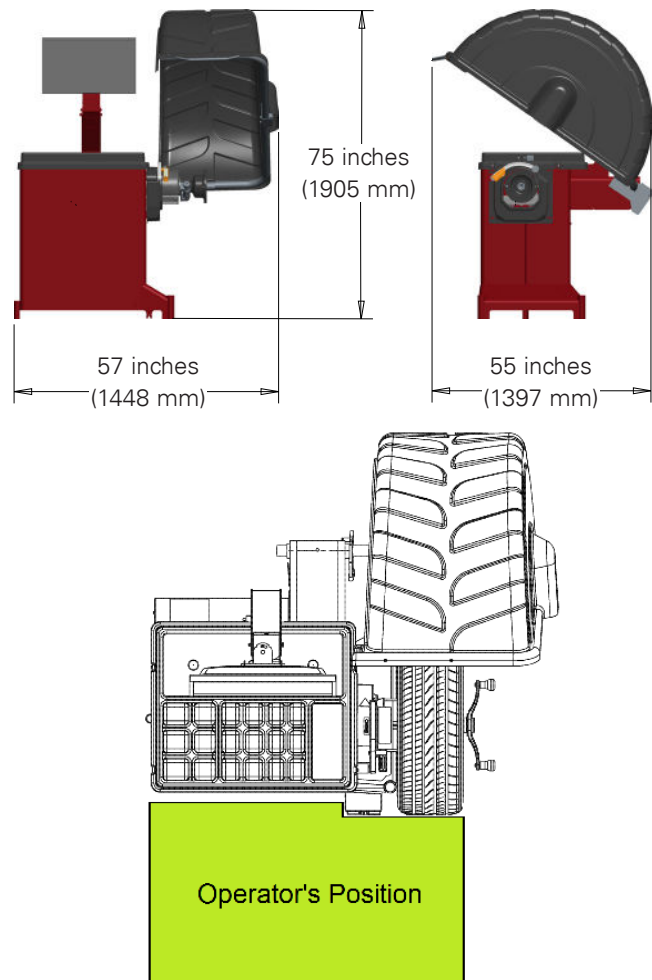


Figure 1 - Space Requirements


### Connect to Power

Your factory trained COATS® Service Technician should do the final check to verify the power installation before connecting the balancer to a power supply. Failure due to improper power connection may void the warranty.

## Balancing Your First Tire

1. **Turn the machine OFF then ON (resets machine).**

**Note:** The machine wakes up using standard clip-on wheel weight locations (Clip 1 & Clip 2) and wheel dimensions.

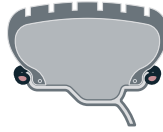

2. **Mount a tire/wheel on the balancer that will use standard clip-on wheel weights.**

Use the most appropriate mounting method.

3. **Always remove any weights already attached to the wheel.**

4. **Enter A & D wheel dimensions using offset arm.**

For Automatic Measurement — pull offset arm out to the wheel, hold it still at clip-on weight position against wheel flange, and wait for BEEP. Return arm to home position.

Clip-on Weight Location — viewed on a cut-away rim for clarification.

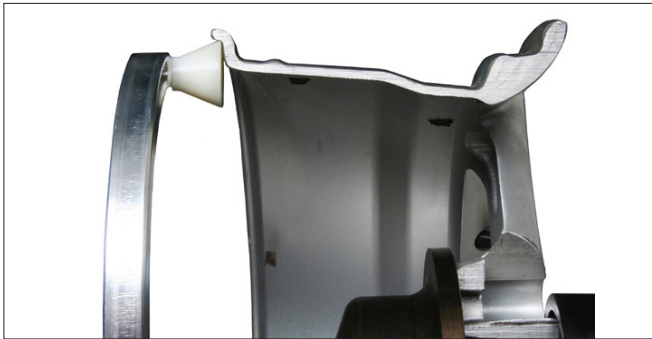


Figure 2 - Clip-On Weight Location

5. **Enter Width wheel dimension.**

For Automatic Measurement — Lower hood.

For Manual Entry — Use plastic calipers to measure wheel width. Press W icon. Use keypad to enter Width value (between 2.0 and 20.0 inches).

6. **Lower hood; wheel spins and unbalances are measured and displayed.**

The corrective weight amount appears in the weight display window for inboard and outboard weight locations.

7. **Raise hood after tire stops rotating.**

**Note:** Wait for wheel to stop before raising the hood.

8. **Position wheel at inboard corrective weight position.**

The inboard center bar highlights.

For Automatic Wheel Positioning — Wheel stops at corrective weight position.

For Manual Wheel Positioning — Rotate wheel until the inboard center bar highlights.

9. **Attach inboard corrective weight.**

Attach specified weight amount at top-dead-center on inside flange of wheel (clip 1).

10. **Position wheel at outboard corrective weight position.**

The outboard center bar highlights.

11. **Attach outboard corrective weight.**

Attach specified weight amount at top-dead-center on outside flange of wheel (clip 2).

12. **Lower the hood to respin the tire/wheel and check balance.**

The inboard and outboard weight readings should now be 0.00.

**Note:** Throughout this manual tire dimensions are referred to as A, W, and D, see figure 3.

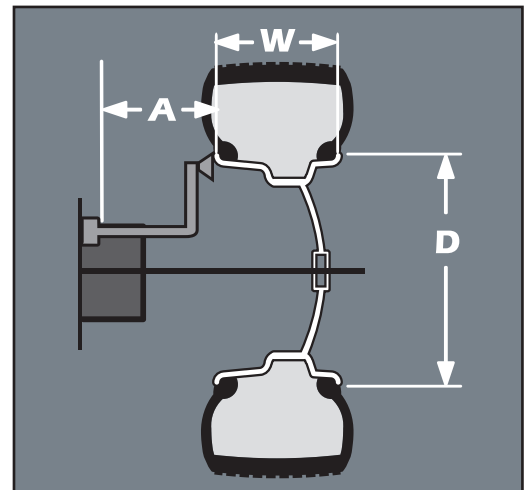


Figure 3 - A, W and D Tire Dimensions

## Principle Operating Parts


### Know Your Unit

Compare this illustration with the unit before placing it into service. Maximum performance and safety will be obtained only when all persons using the unit are fully trained in its parts and operation. Each user should learn the function and location, of all controls.

Prevent accidents and injuries by ensuring the unit is properly installed, operated and maintained.

- A** - Control Panel or Touchscreen (Monitors)
- B** - ON/OFF Switch (Back Of Machine)
- C** - Plug (Back Of Machine)
- D** - Weight Tray Studs
- E** - Weight Tray
- F** - 12 o'clock Laser (if equipped)
- G** - Offset Arm, Measures A & D of Tire/Wheel (Shown In Home Position)
- H** - Hood (Wheel Guard)
- I** - Hood Sonar (Width Sensor - if equipped)
- J** - Faceplate
- K** - 40 mm Shaft
- L** - Laser Locator
- M** - Line Laser
- N** - Cone/Collet

**Note:** Throughout this manual, wheel weights are referred to as Clip-on or Tape-A-Weight. Figure 4 shows an example of each weight.

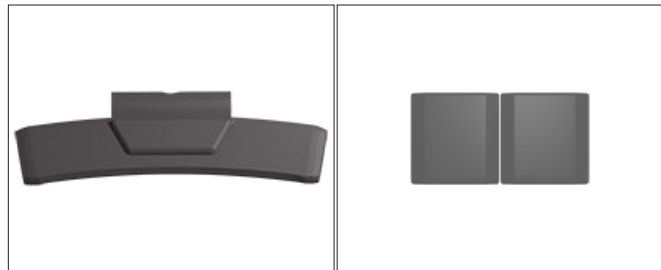

**Clip-on Weight**

**Tape-A-Weight**

*Figure 4 - Corrective Weight Examples. For Best Results, use BADA® Brand Wheel Weights.*





## Control Panel Model Layout

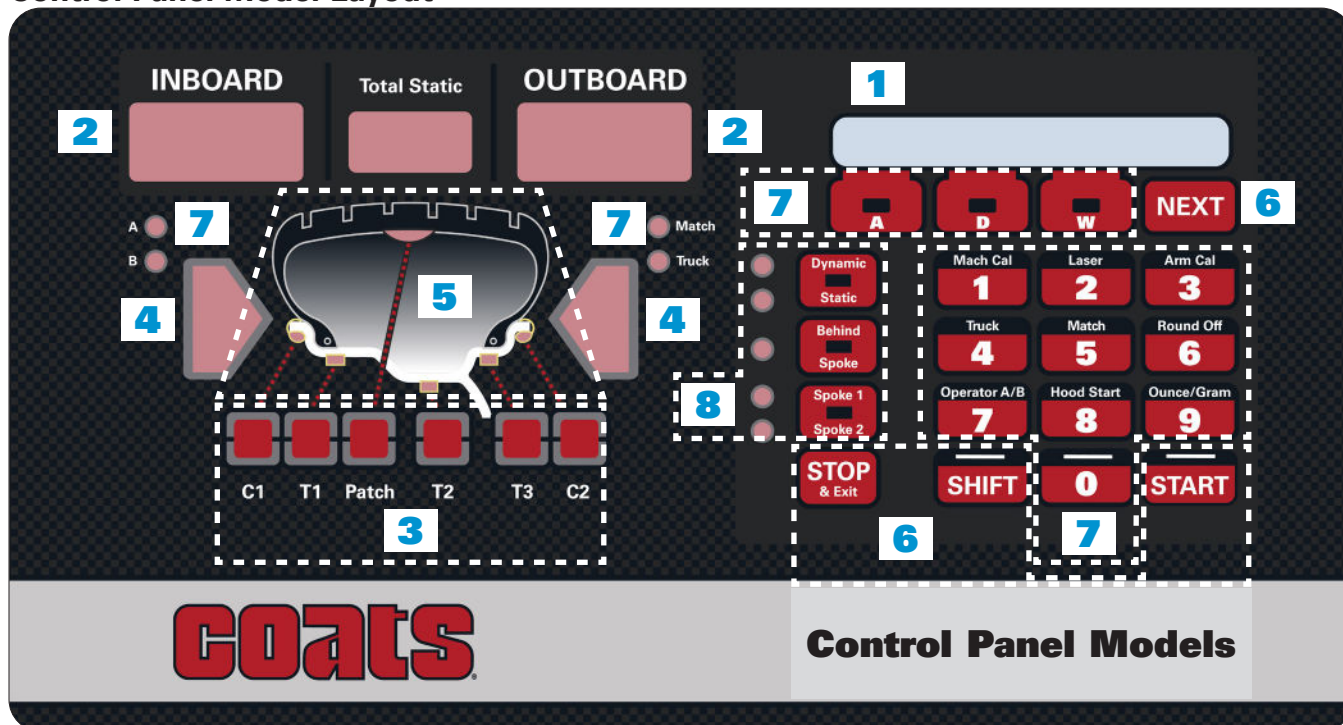


Figure 5 - Control Panel Model Feature Reference

### Control Panel Function and Review

#### 1 Information Box

Displays A, D, and W values, instructions, functions and error messages for the operator.

#### 2 Weight Display Windows

Two weight display windows, one inboard and one outboard, are positioned above the wheel cross section diagram. After a wheel measurement cycle, the balancer calculates the corrective weight amount and indicates it in the appropriate display window. All weight readings are shown in ounces or grams.

The "Total Static" window indicates the value of the total static unbalance. See MATCH BALANCE (Optimization) on page 37 for further details.

#### 3 Direct Select™ Weight Location Keys & Cross-section Diagram (See page 29)

	Clip 1 or T1 Tape	When selected, the inboard weight location on the wheel cross-section diagram illuminates.
	T2 Tape (laser dot blinks), T3 Tape, or Clip 2	When selected, the outboard weight location on the wheel cross-section diagram illuminates.
	Patch Static	When selected, the static weight location on the wheel cross-section diagram illuminates.

#### 4 Weight Position Bars





Located on either side of the wheel cross-section diagram are the weight position bars, one inboard and one outboard. After a measurement cycle, rotate wheel until the center weight position bar blinks, indicating the correct weight placement position is at top-dead-center. When in laser mode (T2 Tape Laser Locator), special blinking bars appear on either side of the center bar to indicate the correct outboard weight placement position. Also remember that the laser beam dot will stop blinking when it is at the correct weight placement location. (become lit steady)









## 5 Wheel Cross-section Graphic and Indicators

The wheel cross-section graphic will illuminate the current weight placement selections.








## 6 Navigation Keys

	SHIFT	Press/hold SHIFT key and press a numbered key to access options, modes and functions.
	STOP & EXIT	Press to deactivate a function, error or to release the wheel so that it can be manually positioned.
	START	Lower hood and press this key to begin a wheel measurement cycle.
	NEXT	Press key to access additional functions or instructions, such as moving to the next weight location.

## 7 Balance Option Keys (and Mode Indicators)

	Wheel Dimensions (DIM)	Press either A, D or W plus numbered key to manually enter wheel data. For additional information, see setting Wheel Dimensions (DIM) on page 30.
	Passenger Car or Truck	Toggle to select either 0.25-ounce passenger car (default) or 0.50-ounce Truck (RV-Lt Truck, heavy wheels). Mode indicator illuminates when activated.
	Round Off or Fine	Toggle to select either a 0.25-ounce (default) or 0.01-ounce (fine) weight increment option.
	Operator A or Operator B	Toggle between two operator memories, A (default) or B. Mode indicator illuminates the active memory.
	Hood Start	Toggle ON (default) or OFF. Sets balancer to automatically start spin cycle when hood is lowered and hood safety interlock system is engaged.
	Ounce or Gram	Toggle to select either Ounce (default) or Gram.

## 8 Balance Mode Keys (and Mode Indicators)

	Dynamic, Dynamic/Total Static or Static	Press to cycle through balance modes. For additional information, see Balance Wheel, page 25-26.
	Behind Spoke	Toggle ON or OFF. See Behind Spoke on page 33 for further details. Mode indicator illuminates when activated.
	Spoke 1 or Spoke 2	Use to set Spoke 1 and Spoke 2 locations for adhesive weights (hidden weights). See Behind Spoke on page 33 for further details.
	Machine Calibration	See Machine Calibration on page 38 for further details. Mode indicator illuminates when activated.
	Laser	Toggle ON or OFF to manually activate Laser Guided Operation™ mode.
	Arm Calibration	Machine Calibration is required before Arm Calibration. The Arm Calibration mode is activated.
	Match Balance	See Match (Optimization) on page 37 for further details. Mode indicator illuminates when activated.

## Touchscreen Model Layout

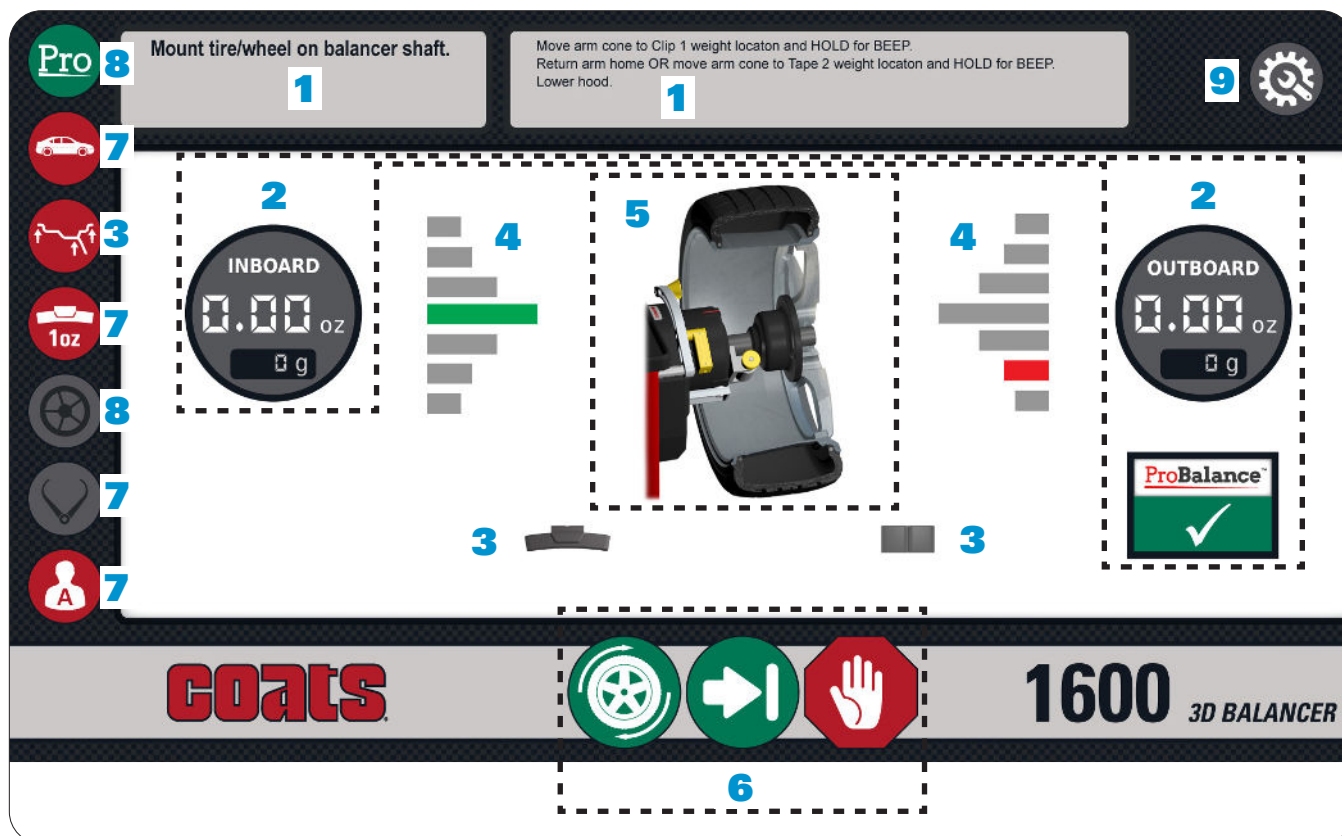


Figure 6 - Default Touchscreen Model Feature Reference

### Touchscreen Function and Review

#### 1 Information / Instruction Windows

Displays instructions, functions and error messages for the operator.

#### 2 Weight Display Windows

Two weight display windows, one inboard and one outboard, are positioned by the weight position bars. After a wheel measurement cycle, the balancer calculates the corrective weight amount and indicates it in the appropriate display window. All weight readings are shown in ounces or grams.

The ProBalance Technology™ window indicates the value of any excessive residual unbalance. See ProBalance Technology™ - On Touchscreen Models on page 36 for further details.

#### 3 Direct Select™ Weight Location Icons & Cross-section Diagram

	Direct Select™ Weight Location	Select to go to the Direct Select Weight Location Screen, see page 29.
	Clip 1 or T1 Tape	The activated inboard weight location on the wheel cross-section diagram.
	T2 Tape, T3 Tape, or Clip 2	The activated outboard weight location on the wheel cross-section diagram.




#### 4 Weight Position Bars

Located on either side of the wheel cross-section diagram are the weight position bars, one inboard and one outboard. After a measurement cycle, the wheel stops and the center weight position bar blinks, indicating the correct weight placement position is at top-dead-center. When in laser mode (T2 Tape laser locator), special blinking bars appear on either side of the center bar to indicate the correct outboard weight placement position. Also remember that the laser beam dot will stop blinking when it is at the correct weight placement location (becomes lit steady).





## 5 Wheel Cross-section Graphic and Indicators

On the main screen, a wheel cross-section graphic illustrates the wheel balancer operational status.


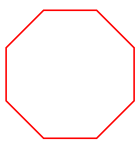
## 6 Navigation Icons





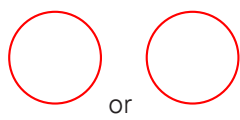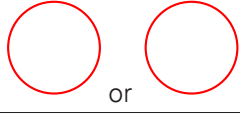



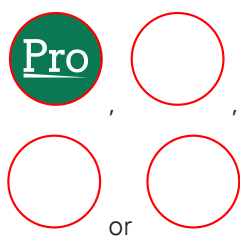


	STOP & EXIT	Deactivates a function or error. Also use to release the wheel so that it can be manually positioned.
	SPIN	Lower hood and press this icon to begin a wheel measurement cycle.
	NEXT	Press this icon to access additional functions or instructions, such as moving to the next weight location.

## 7 Balance Option Icons

 or	Operator A or Operator B	The Operator Memory option that is activate. Toggle between two operator memories A (default) or B.
 or	Passenger Car or Truck	The weight increment option that is activated. Toggle to select either 0.25-ounce passenger car (default) or 0.50-ounce Truck (Lt Truck, heavy wheels).
 or	Round Off or Fine	Toggle to select either a 0.25-ounce (default) or 0.01-ounce (fine) weight increment option.
 or	DIM ON or DIM OFF	Toggle wheel dimensions ON or OFF (default). See Setting Wheel Dimensions (DIM) on page 30.



## 8 Balance Mode Icons

 or	ProBalance, Dynamic, Static or Dynamic/Static	The Balance mode that is activated. Scroll to select Dynamic (default), ProBalance, Static or Dynamic/Static. When enabled, the ProBalance Technology™ icon button indicates any excessive residual unbalance.
 or	Behind Spoke	Select Behind Spoke mode to activate (turns red). See Behind Spoke on page 33 for further details.


9 <i>Settings Screen Icons</i>		
  or	General Settings Menu	<p>Select this icon to access and set additional balancer functions.</p> <ul style="list-style-type: none"> <li>• Perform Machine Calibration</li> <li>• Lock the screen for cleaning</li> <li>• Adjust the volumn level.</li> </ul>
  or	Documentation Menu	<p>Access these screen for a listing of our documentation and video website addresses.</p>
  or	User Menu	<p>Access these screen to get the following operator information:</p> <ul style="list-style-type: none"> <li>• Current weight and balance mode</li> <li>• Relative wheel dimensions and imbalance data</li> <li>• Select the individual Operator button (A memory or B memory) to show the relative information.</li> </ul>
  or	Owner Menu	<p>Enter password to assess the following actions:</p> <ul style="list-style-type: none"> <li>• Adjust and Set ProBalance Thresholds</li> <li>• Toggle Hood Start Settings</li> <li>• Enable/Disable Sonar</li> <li>• Pedal Set-Up (if equipped)</li> </ul>
  or	Coats Service Menu	<p>Your COATS® Service Technician may assess this for information to help diagnose service concerns. A password is required.</p>
	Exit Menu Screen	<p>Press this icon to exit the settings screen and return back to the main screen.</p>





When the icon is pressed to access the **General Settings Menu** the following screen will display.

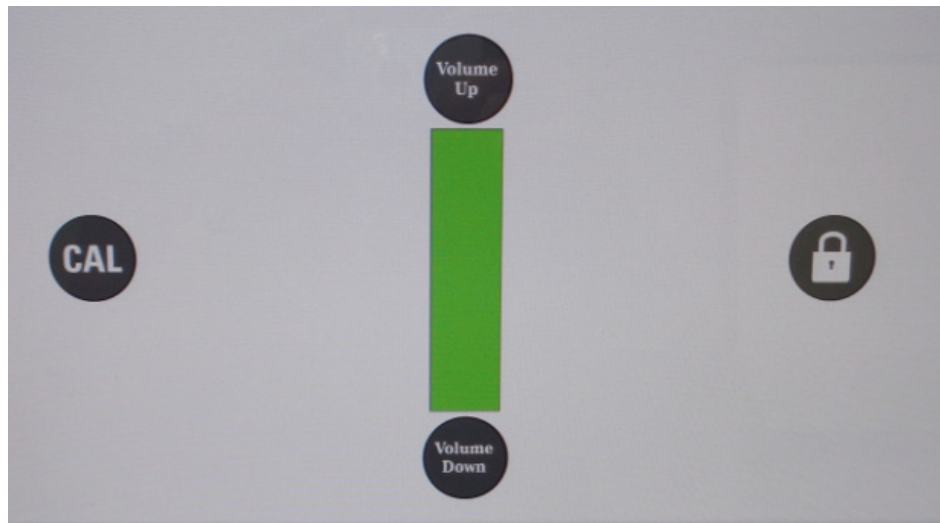


When the icon is pressed, the following screen will display.

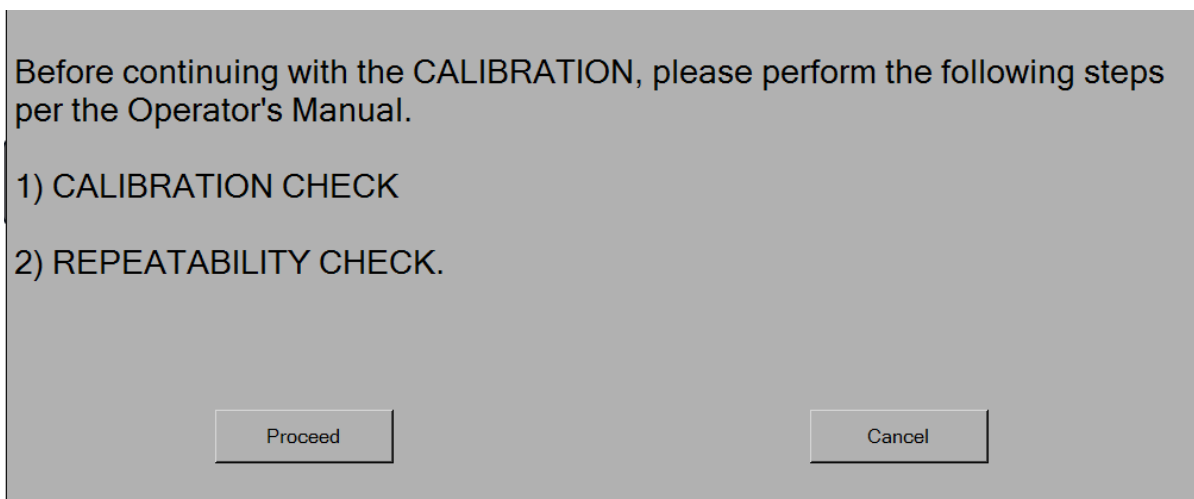

The operator will then press .  or  buttons.


## Owner Settings Menu

From the main screen, select the Settings icon. Now select the Owner Menu icon. The screen will prompt you to enter owner password. Type in **1601** on the keypad; then press the Enter button to access the Owner Settings Menu shown below.

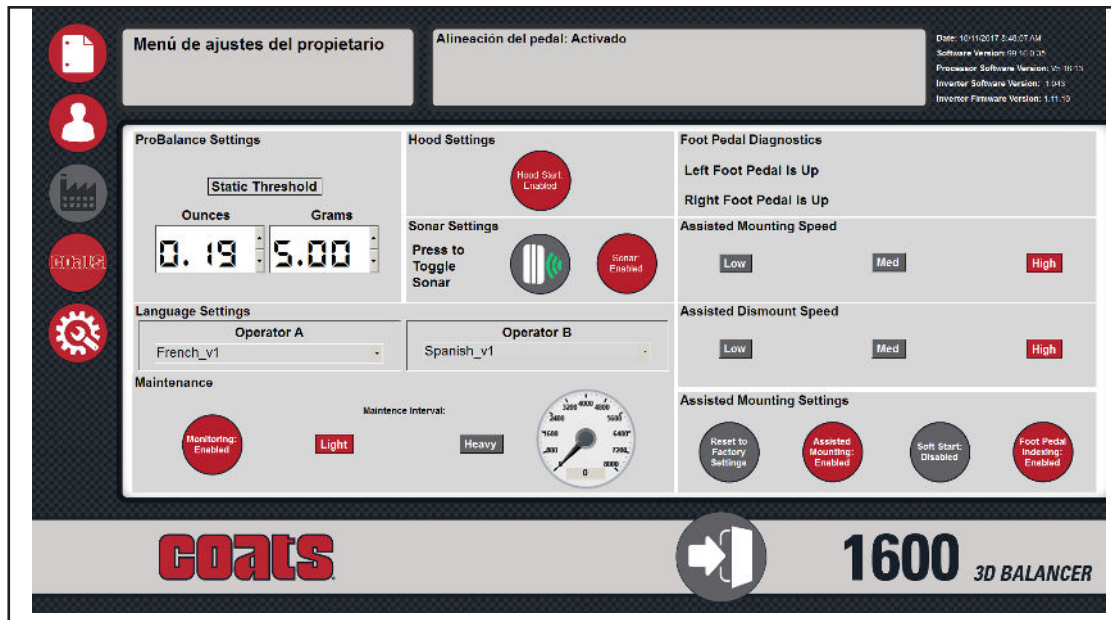


## Information / Instructions Window

Displays instructions, functions and error messages for the operator.

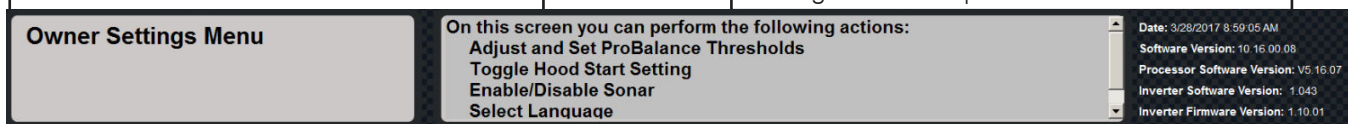


## ProBalance Settings

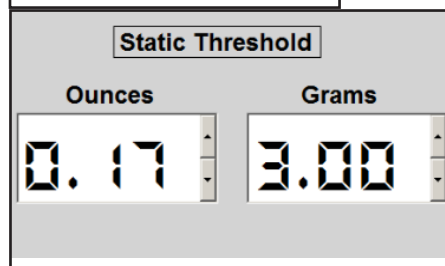


Allows the Owner to set the Static Threshold for Ounces and Grams (in ProBalance mode) individually. This will determine when the wheel balancing is acceptable and within limits.

## Language Settings - if equipped

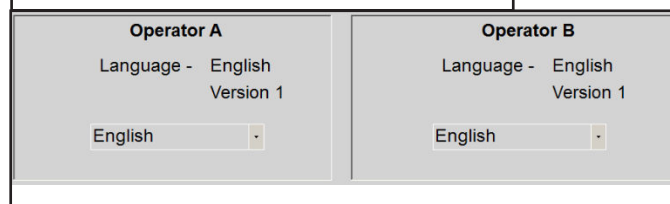

Allows the Owner to set the Language to display, in the message window, for each Operator independently.

## Maintenance Monitoring - if equipped

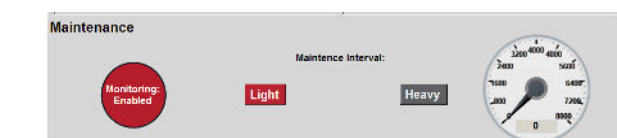

Allows the Owner to set and reset the Maintenance monitoring interval for Spins. Dials indicate the current spins total.



## Hood Settings

Hood Start:  
Enabled

Toggles Hood Start (starts balancing when hood is closed) On and Off.

## Sonar Settings

Press to  
Toggle  
Sonar



Sonar:  
Enabled

Toggles Sonar (using Sonar to determine tire width) On and Off.

## Foot Pedal Diagnostics

Left Foot Pedal is Up

Right Foot Pedal is Up

Displays Foot Pedal positions, Up or Down, for pedal troubleshooting.

## Assisted Mounting / Dismounting Speeds

Low

Med

High

Allows three speed selections for Pedal-Assist Wheel Mounting and Dismounting feature.

## Foot Pedal Settings

Reset to  
Factory  
Settings

1

Assisted  
Mounting  
Mounting:  
Enabled

2

Assisted  
Mounting  
Soft Start:  
Enabled

3

Foot Pedal  
Indexing:  
Enabled

4

1. Resets all Foot Pedal adjustments back to initial Factory Settings.
2. Toggles Pedal-Assist Foot Pedal Mounting feature. (Enabled / Disabled)
3. Toggles the Pedal-Assist Foot Pedal Slow Start feature. (Enables / Disabled)
4. Toggles the Foot Pedal Indexing feature. (Enables / Disabled)

## Alternate Languages if equipped Information / Instructions Window

Displays instructions, functions and error messages for the operator in other languages.

Menú de ajustes del propietario

En esta pantalla puede realizar las siguientes acciones:  
Ajustar y fijar umbrales de ProBalance  
Alternar la configuración de inicio del capó  
Activar/desactivar el sónar  
Seleccionar idioma

Date: 3/27/2017 9:20:57 AM  
Software Version: 10.16.00.08  
Processor Software Version: V5.16.07  
Inverter Software Version: 1.043  
Inverter Firmware Version: 1.10.01

## Power Switch

The ON/OFF switch location (figure 7) is on the back of the balancer; below the weight tray.

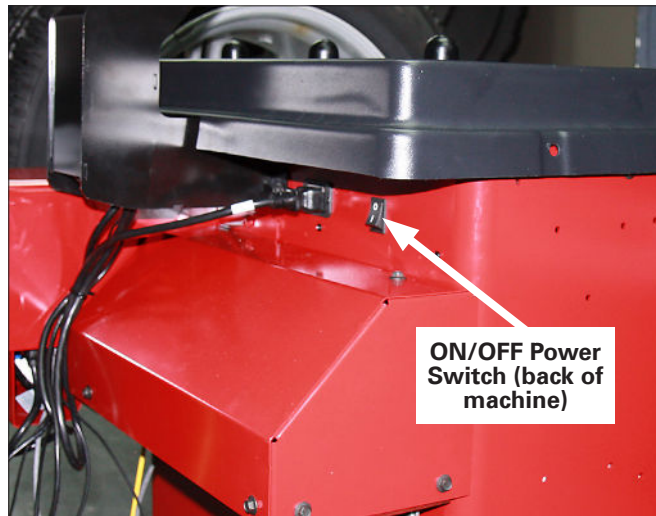


Figure 7 - On/Off Switch

## Weight Tray

Weight pockets are laid out so that wheel weights are easily accessible. Use the weight tray studs for handy storage of wheel mounting adapters.



Figure 8 - Balancer Weight Tray

## Using The Offset Arm

When not in use or when prompted by the balancer instructions, store the offset arm in the home position as shown in figure 9.

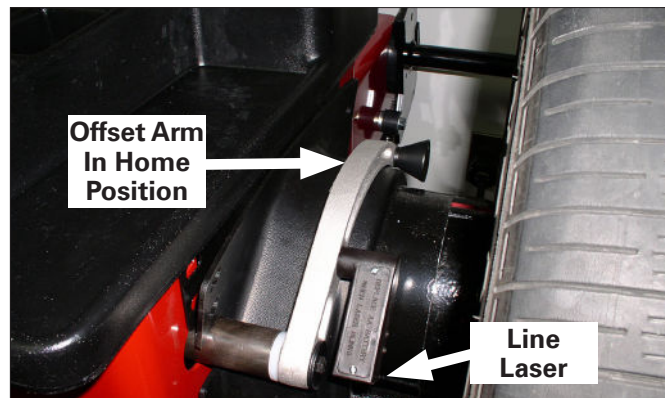


Figure 9 - Location of Offset Arm (Stored In Home Position) and Laser Locator

Use the offset arm gauge (figure 10) to automatically measure the distance from wheel to machine and the wheel diameter.



Figure 10 - Automatic A & D Measurement At Clip-on Weight Location

Be sure to place the offset arm on the wheel flange at the clip-on weight location as shown figure 11. (for C1 and T1 measurements)



Figure 11 - Clip-on Weight Location Viewed on a Cut-Away Rim for Clarification.

**Note:** Use the offset arm to automatically measure the A & D dimension for all balancing modes except Patch Static; see page 32 Patch Weight Balance (if equipped).

**Note:** Refer to page 31 to measure the A dimension manually using the offset arm.

If the T2 Tape (hidden Tape-A-Weight) location is selected, use the offset arm to enter A2 & D2 measurements automatically. (see figure 14) After the A & D measurement is entered, move the arm from the C1 clip-on weight location to the inner area of the wheel; up against the rim at the outboard weight placement location (see figures 12 and 13). Wait for the BEEP.



Figure 12 - Hidden Weight Location Viewed on a Cut Away Rim for Clarification.

**Note:** The T2 Tape Direct Select™ Weight position is the only mode that requires the A2 & D2 dimension measurements.

**Note:** Use laser locators for correct positioning of the T2 Tape Direct Select™ Weight position, refer to page 29.

**Important:** The A2 measurement must be at least 2 inches greater than the A1 measurement.

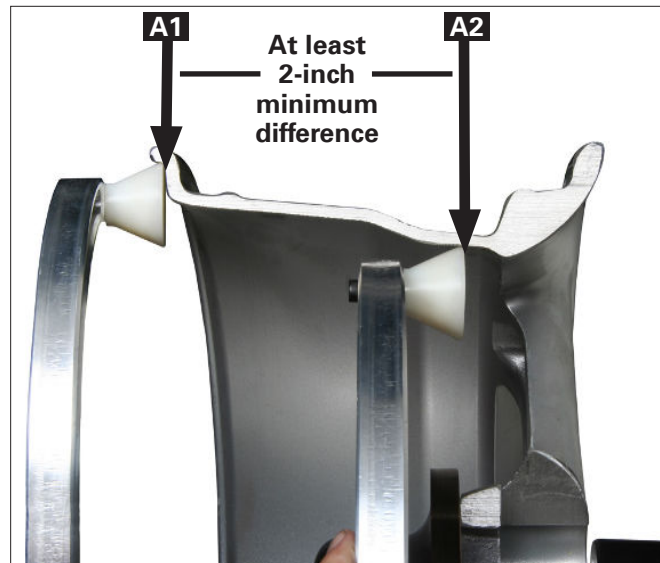


Figure 13 - T2 Tape (Hidden Tape-A-Weight), Keep At Least 2 inches Between A1 and A2 Measurement

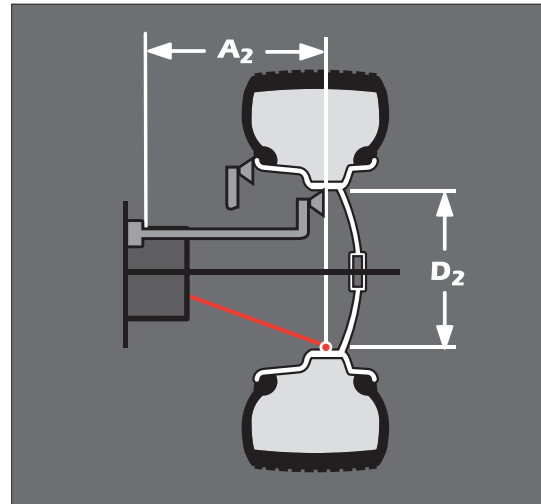


Figure 14 - T2 Tape (Hidden Tape-A-Weight), Data Entry Diagram



## Using The Laser Locator

If the T2 Tape (hidden Tape-A-Weight) location is selected, use the laser locator to point to the desired hidden weight location (figures 15).

**1.** Rotate laser locator knob to position the laser dot outboard at the desired T2 Tape (hidden Tape-A-Weight) location.

**Note:** Choose a weight position as far inward (in the rim) as wheel allows (figure 15a). If weight can't be placed outside of wheel center, then Dynamic Balancing can't be calculated.

**Note:** The T2 Tape Direct Select™ Weight position is the only mode that requires the A2 & D2 dimension measurements (figure 12).

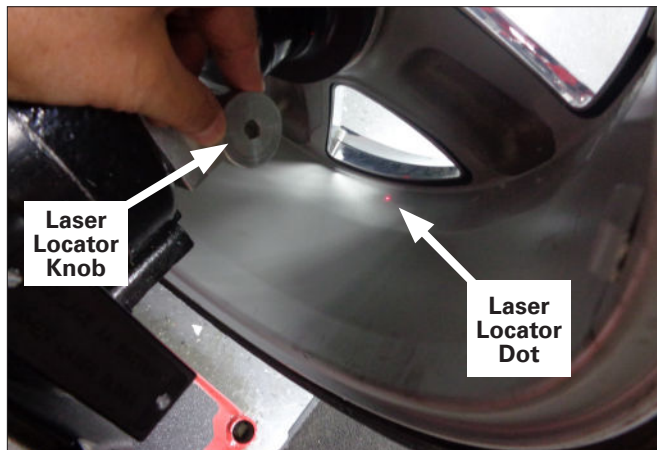


Figure 15 - Positioning Laser Dot At T2 Tape Hidden Weight Location (A2)

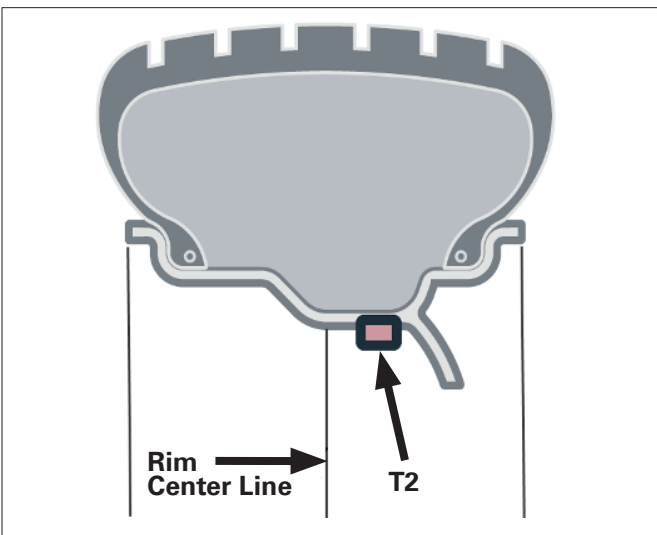


Figure 15a - Weight As Far Inward On Rim As Possible

## Using The Line Laser

If the T2 Tape (hidden Tape-A-Weight) location is selected, use the line laser to align the offset arm with the laser locator dot (figures 13 and 14); entering A2 & D2 measurements automatically.

Press switch on the laser housing and it turns ON for 10 seconds, then automatically shuts OFF so you do not have to hold the button. The line laser is powered by a AA battery. When the battery is low the laser blinks indicating that it is time to replace the battery.

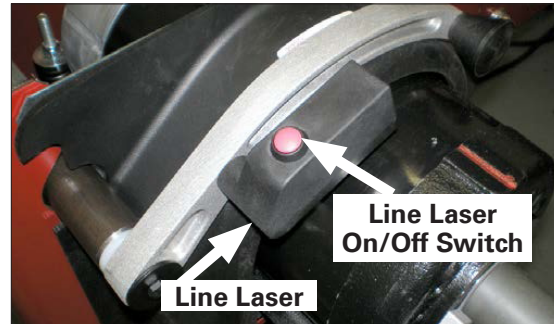


Figure 16a - Laser Locator ON/OFF button

**1.** Grasp arm at the line laser and pull out and up to the wheel flange C1 (figure 11). Hold arm still at the clip-on weight location and wait for BEEP.

**2.** Press button on line laser to activate the beam.

**3.** Move arm to inner area of wheel and align line laser beam with laser locator dot (figure 16b). Hold arm still, up against the rim, in the same plane as the T2 Tape (hidden Tape-A-Weight) location (figure 12 and 13) and wait for BEEP. Refer to figure 16b.

**Note:** T2 must be selected to activate Dot Laser. The line laser remains on for ten seconds after its button is pushed.

**Note:** The balancer (if equipped) automatically selects the T2 Tape location, when the second inner area weight location is entered before returning the arm to home position.

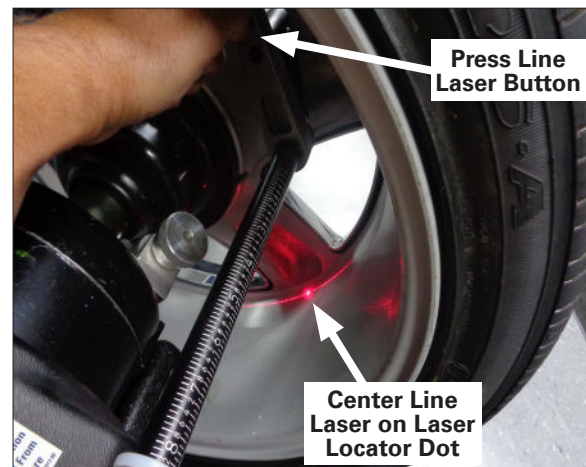


Figure 16b - Positioning Line Laser Beam At T2 Tape Hidden Weight Location (A2)

## Laser Guided Operation™ System



The operator may automatically select (if equipped) or Direct Select™ the T2 Tape Laser Location, activating the Laser Guided Operation™ feature. This Direct Select™ weight location is used when placing hidden adhesive weight at the inner area of the wheel and is the required weight location selection for the Behind Spoke mode (see page 33).

Follow these steps to use the Laser Guided Operation™ feature for accurate placement of hidden Tape-A-Weights:

**Important:** Only use the Direct Select Weight position Clip 1 or T1 Tape and T2 Tape (location activated). Refer to Using The Offset Arm on pages 18 - 19 and Using The Lasers on page 20.

**1.** Begin by mounting the wheel assembly on the balancer shaft.

**2.** Direct Select™ T2 Tape as the outboard weight location.

**Note:** The laser locator dot activates and blinks.

**3.** Rotate the laser locator knob to position the laser locator dot at the desired weight location. See figures 15 and 16.

**Note:** Choose a weight position as far inward (in the rim) as wheel allows.

**4.** Using the offset arm, enter the A and D wheel measurements, wait for BEEP. Before returning arm to home position, turn ON the Line Laser, move arm to inner area of wheel and position the line laser beam at the T2 Tape laser locator dot position; ensure A and D Arm is in contact with Rim, wait for BEEP. Return arm to home position.

**5.** Lower hood; wheel spins.

**6.** When the inboard unbalance is displayed, the inboard center bar highlights. Attach inboard corrective weight at top-dead-center.

**Note:** If an inboard corrective weight is not required then the wheel will stop at the outboard corrective weight location (if equipped) or manually if not.

**7.** Press NEXT to rotate wheel to outboard corrective weight location where the outboard center bar is steady and the two bars on either side blink.

**Note:** The laser locator dot will stop blinking and turn solid when wheel reaches correct weight position.

**Note:** This Laser Product is designated as Class 2 during all procedures of operation.

**8.** Center and attach the outboard corrective weight at laser dot location as shown in figure 17.

**9.** Respin tire/wheel to check balance.

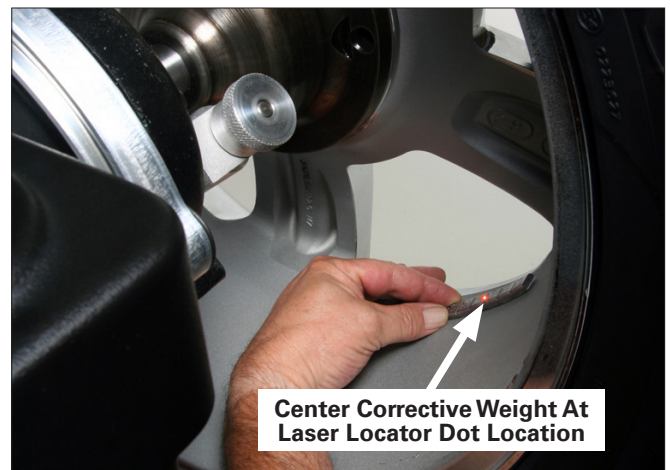


Figure 17 - Centering Corrective Hidden Weight at Laser Dot Location.

## Laser Identification



On/Off

Laser Aperture

### Arm Line Laser

Line Generator  
Wavelength 650nm  
Emission type: CW  
Laser Power for  
Classification <500uW  
Divergence<2mRad x  
30°



Laser Aperture

### Dot Laser

Dot Generator  
Wavelength 655nm  
Emission type: CW  
Laser Power for  
Classification <700uW  
Divergence<1mRad



Laser Aperture

### 12 O'Clock Laser

Line Generator  
Wavelength 650nm  
Emission type: CW  
Laser Power for  
Classification <300uW  
Divergence<2mRad x 75°



### Using the Hood Sonar (Width Sensor - if equipped)

When prompted by the balancer instructions, use the hood sonar (width sensor, figure 18) to enter wheel width measurement automatically. Lower balancer hood to enter the measurement.



Figure 18 - Tire Width Sonar Located Inside Hood

**Note:** Refer to page 31 to measure the W dimension manually using the plastic calipers.

### Hood (Wheel Guard)



**Never raise up the wheel guard before the wheel has come to a stop. Keep hair, loose clothing, fingers and all parts of body away from moving parts.**

If, due to a fault in the machine, the wheel keeps spinning permanently, switch the machine OFF at the master switch or by unplugging the plug from the power supply. Wait until the wheel stops before opening the wheel guard.

### Auto Wheel Positioning (if equipped)



**Keep hair, loose clothing, fingers and all parts of body away from moving parts.**

The balancer's auto positioning feature stops the wheel automatically at the corrective weight location. The wheel is spun and unbalances are measured and displayed. The inboard center bar highlights as the balancer stops the wheel at the inboard corrective weight location (top-dead-center). (If an inboard corrective weight is not required, then the wheel will stop at the outboard corrective weight location.) Press NEXT. The outboard center bar highlights as the wheel automatically moves and stops at the outboard corrective weight location (top-dead-center).

Pressing NEXT moves the wheel automatically to the next corrective weight location. Pressing STOP & EXIT releases the wheel so that it can be manually positioned.

After several minutes of inactivity, the auto positioning feature will turn itself OFF. Press NEXT to make the feature activate again.

### 12 o'clock Laser

When wheel is indexed to either the Clip 1 or Tape 1 inboard corrective weight location, then the 12 o'clock laser activates. Use the 12 o'clock laser line to aid in corrective weight placement by centering the weight to the laser line as shown in figure 19.



Figure 19 - Centering Corrective Weight At 12 o'clock Laser Line Location

## Display Mount

When the display mount is in the folded position, the display rests securely on the weight tray, as shown in figure 20. Use locking screws on the display mount to secure it in the upright position, as shown in figure 21.

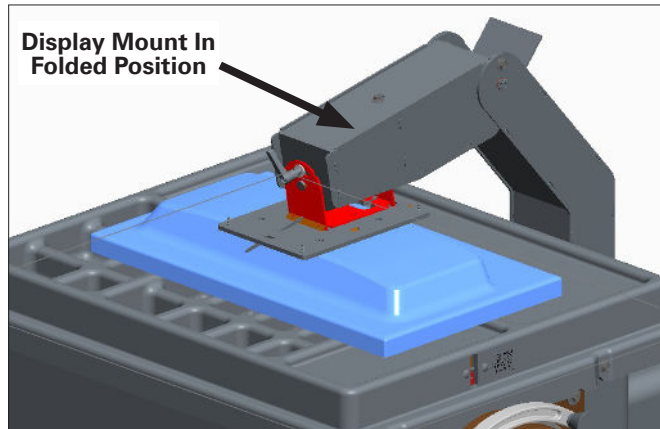


Figure 20 - Display Mount In Folded Position

The locking lever allows the user to position the display front or right; and then lock in place. Positioning the display makes it easier to view and touch, while operating the wheel balancer.

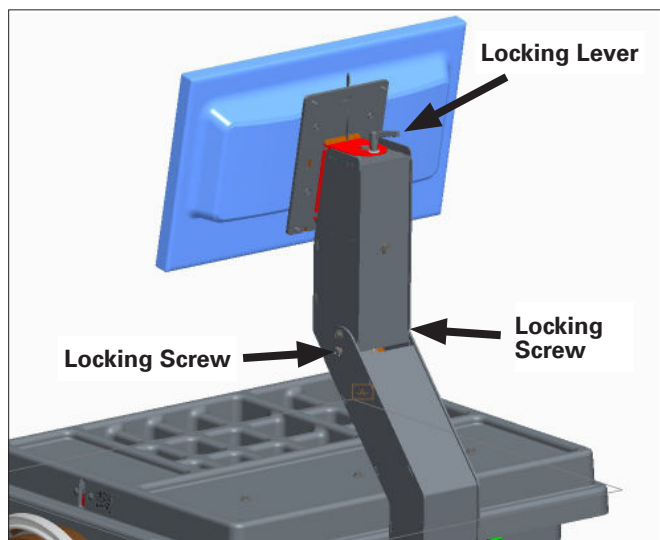


Figure 21 - Display Upright In Front Position

## Control Panel (if equipped)

The balancer control panel is a durable panel (figure 22). To enter a function, use your finger to press the appropriate function key.



Figure 22 - Press Control Panel Keys

**Note:** Only press the control panel with **your fingers**. Never use the weight hammer or other pointed objects to press on the panel.

## Touchscreen (if equipped)

To enter a function, use your finger to press the appropriate function icon.



Figure 23 - Press Touchscreen Functions

**Note:** Only press the touchscreen with **your fingers**. Never use the weight hammer or other pointed objects to press on the screen.

## Mounting Wheel On Balancer Shaft



**Avoid back injury, seek assistance when lifting heavy tire/rim assemblies onto the balancer shaft.**



**Failure to tighten the hub nut properly may result in the wheel dismounting, causing personal injury and property damage.**

Select the most appropriate mounting method for the wheel you are balancing. Using the proper method ensures secure mounting and safe balancer operation, and prevents damage to the wheel.

On most wheels, the inner side of the wheel hub usually has the most uniform surface for wheel balancing. Always center the wheel by the most uniform shaped side of the hub to achieve the most accurate balance.

Regardless of mounting type, on standard units, always make sure that the wheel is forced firmly against the shaft and faceplate, and that the hub nut engages the threaded shaft for at least four complete turns. To assist in centering the wheel properly, rotate the wheel and the shaft while tightening the hub nut.

## Standard Back Cone/Collet Mounting

Most original equipment and steel wheels can be mounted properly using this method. The wheel is centered on a cone/collet from the inner side of the hub.

- 1.** Place the cone spring onto the balancer shaft with the large end towards the faceplate.
- 2.** Select the cone/collet that best fits the center hole in the wheel. Slide the cone/collet onto the shaft with the large end towards the cone spring.
- 3.** Lift wheel onto the shaft and center it on the cone/collet.
- 4.** Attach pressure cup to hub nut. Install the hub nut assembly onto the shaft and tighten it securely against the wheel. The wheel must be forced firmly against the faceplate. The hub nut must engage the threads for at least four full turns

**Note:** Use a nylon spacer (protective ring) to protect custom wheel finishes.

**Note:** If the hub nut will not tighten completely, use the standard front cone mounting method (figure 25).

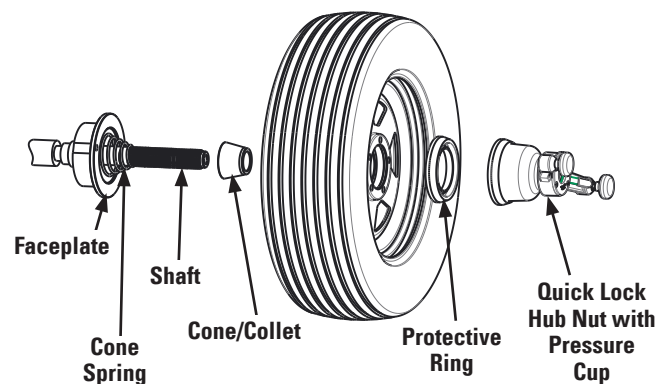


Figure 24 - Standard Back Cone/Collet Mounting

## Optional Front Cone/Collet Mounting

A wheel should be centered by the outer side of the hub only when the inner surface will not provide an accurate surface to center on, and the front will.

1. Select the cone/collet that best fits the center hole in the wheel.
2. Lift the wheel onto the balancer shaft and slide it back against the faceplate.
3. Slide the cone/collet onto the shaft and into the center hole of the wheel. You will need to lift the tire to seat the cone in the center hole.
4. Install the hub nut (without pressure cup) onto the shaft. Tighten it securely against the cone/collet. The hub nut must engage the threads for at least four full turns.

**Note:** If the hub nut will not tighten completely because of a lack of threads, use an additional cone/collet as a spacer between the mounting cone/collet and the hub nut. The wheel must be forced firmly against the faceplate.

**Note:** Do not front cone chrome or clad wheels.

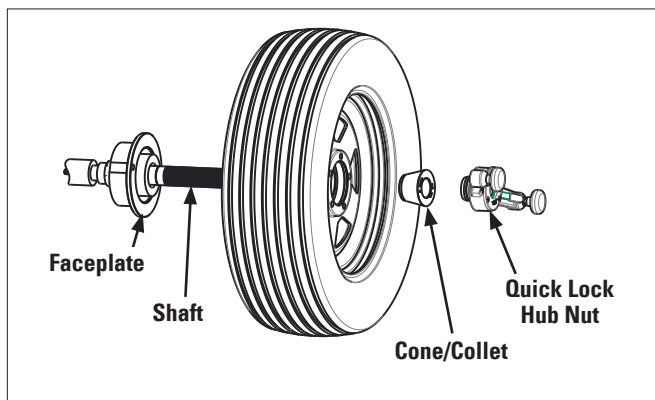


Figure 25 - Front Cone/Collet Mounting

## Alternate Mounting

If the wheel has a protruding outer hub which will not permit the use of the pressure cup, or the cup will not permit the hub nut to engage at least four turns of the shaft, this alternate method should be used.

1. Place the cone spring onto the balancer shaft with the large end towards the faceplate.
2. Select the cone/collet that best fits the center hole in the wheel. Slide the cone/collet onto the shaft with the large end towards the faceplate.
3. Lift wheel onto the shaft and center it on the cone/collet.
4. Use the small nylon spacer (no-mar ring) or a centering cone/collet to press against the outer wheel hub.
5. Install the hub nut (without the pressure cup) onto the shaft. Tighten securely.

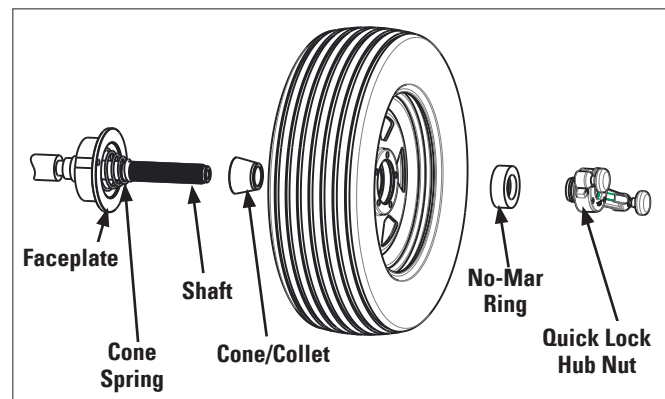


Figure 26 - Alternate Mounting



## Pedal-Assisted Wheel Mounting Operation - 1600 only (if equipped)




**Avoid back injury, seek assistance when lifting heavy wheel assemblies onto the balancer shaft.**

**Failure to tighten the hub nut properly may result in the wheel dismounting, causing personal injury and property damage.**

### Standard Back Cone/Collet Mounting


Most original equipment and steel wheels can be mounted properly using this method. The wheel is centered on a collet from the inner side of the hub.

1. Place the cone spring onto the balancer shaft with the large end towards the faceplate.
2. Select the collet that best fits the center hole in the wheel. Slide the collet onto the shaft and push against the cone spring.
3. Lift wheel onto the shaft and center it on the collet.
4. Thread the hub nut on 2 turns until the rear of the hub nut is flush with the end of the shaft.
5. With the left hand, support the wheel assembly to keep it centered on the collet. Lift up to remove the weight of the wheel from the collet and shaft so that proper operation may occur.
6. With the right hand, hold the hub nut with a firm grip
7. With the left foot, press the left pedal while maintaining a firm grip on the hub nut and wheel assembly. The wheel assembly must remain stationary with no rotation.

 The rotation of the shaft may be stopped at any time by removing foot from the pedal.


8. The function will automatically stop rotation once the torque limit or timeout limit has been reached.

9. Complete installation by applying final torque manually to the hub nut.

 The pedal-assisted mounting feature is not designed to apply sufficient mounting torque for balancing. The operator must manually finish applying torque to the hub nut to prevent loose hub nut errors.



**To avoid contact with moving parts you must move to the operator's position as shown here prior to activating the Pedal Assisted Wheel mounting switches in either direction.**

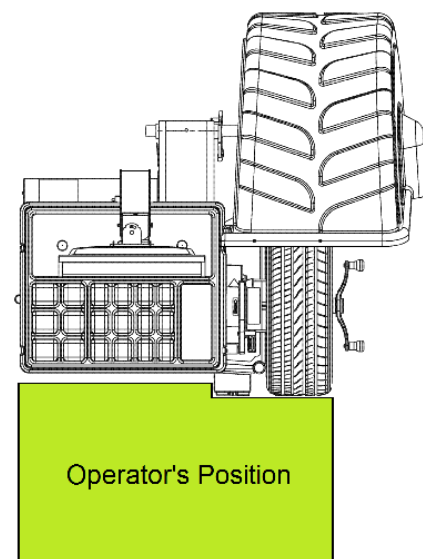

## Pedal-Assisted Wheel Removal

### Operation 1600 only (if equipped)

1. Remove excess torque from the hub nut by manually loosening half of a turn.

**!** The pedal-assisted mounting feature is not designed to apply sufficient torque for removing the hub nut from a locked state. The operator must start the process of loosening the hub nut a minimum of ½ turn.

2. With the left hand, support the wheel assembly to keep it centered on the collet. Lift up to remove the weight of the wheel from the collet and shaft so that proper operation may occur.

3. With the right hand, hold the hub nut with a firm grip

4. With the left foot, press the right pedal while maintaining a firm grip on the hub nut and wheel assembly. The wheel assembly must remain stationary with no rotation.

5. Guide the hub nut off the end of the shaft, and remove.

6. Remove the wheel as normal.




### Auto-Index Feature

During wheel balancing (except Static mode) you can tap either foot pedal to advance the balancer to the next weight location.

This feature takes the place of touching the Next button on the display.



**To avoid contact with moving parts you must move to the operator's position as shown here prior to activating the Pedal Assisted Wheel mounting switches in either direction.**

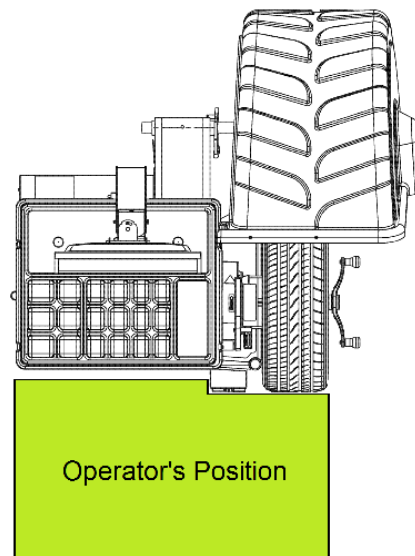



## Direct Select™ Weight Placement Location

### Weight Placement Options

When the machine is turned ON, the balancer defaults to a 2-plane dynamic mode using standard clip-on wheel weight locations (Clip 1 and Clip 2) and wheel dimensions. Before setting wheel dimensions and spinning the wheel, set alternate weight placement locations as follows (see also figures 27 and 28):

**Clip 1 (default)** - select this location, dynamic or static mode, to place a standard clip weight on the inboard rim flange at 12 o'clock (top dead center).

**T1 Tape** - select this location, dynamic mode, to place an adhesive weight on the inboard side of the wheel. This is the horizontal plane at the outer edge of the rim at 12 o'clock (top dead center).

**Patch** - select this location, static mode, for a patch weight centered inside the tire. See Patch Weight Balance on page 32 for further details (available on certain models).

**T2 Tape** - select this location, dynamic or static mode to place the adhesive (hidden) weight on the outboard side of the wheel. This is the horizontal plane at the inner area of the rim.

**T3 Tape** - select this location, dynamic mode, to place an adhesive weight on the outboard side of the wheel that is the horizontal plane at the outer edge at 12 o'clock (top dead center).

**Clip 2 (default)** - select this location, dynamic mode, to place a standard clip weight on the outboard rim flange at 12 o'clock (top dead center).

### Direct Select™ Control Panel Models

**1.** Press a Direct Select key (see page 10) to enter an alternate weight placement location on the wheel. The selected weight location on the wheel cross-section diagram illuminates.

**2.** Press EXIT to return to the main screen.

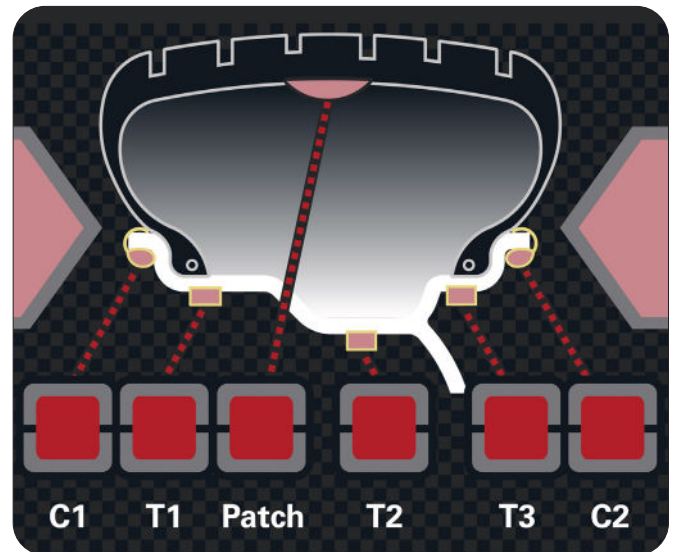



Figure 27 - Direct Select™ Weight Icons And Wheel Cross-section Diagram

### Direct Select™ Touchscreen Models

**1.** Press the Direct Select icon  (see page 12) to go to the Direct Select screen. Press a Direct Select icon to enter an alternate weight placement location on the wheel. The selected weight location on the wheel cross-section diagram highlights.

**2.** Press EXIT to return to the main screen.

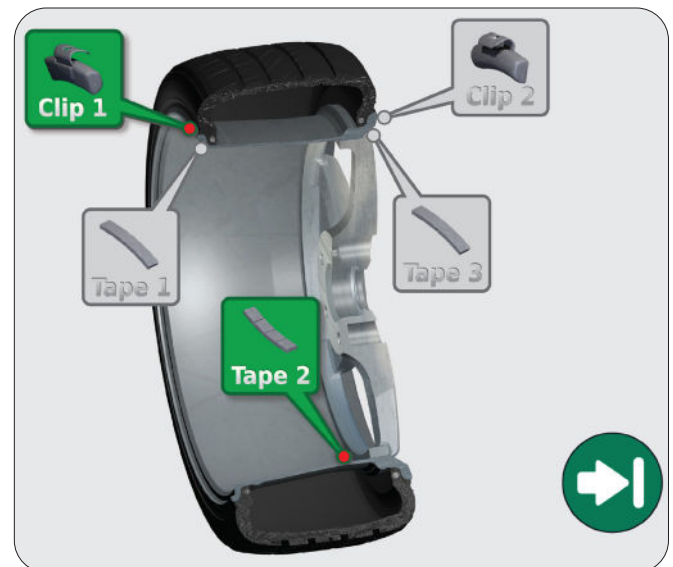


Figure 28 - Direct Select™ Weight Icons And Wheel Cross-section Diagram

## Setting Wheel Dimensions (DIM)

Before a wheel can be balanced, wheel dimensions must be entered into the balancer computer.

### Definition of Dimensions (DIM)

#### A = Offset

The distance measured from the balancer ("0" on offset arm) to inner plane of the rim (inner weight location).

#### W = Width

The width of the wheel at the rim flanges, measured with the calipers as shown in figure 31.

**Note:** Only use calipers provided by the wheel balancer manufacturer because others may be different.

#### D = Diameter

The diameter of the wheel as indicated on the tire.

**Note:** A thick flange, on some aluminum wheels, can effect the measured diameter. For example, a 16-inch rim can have a measured diameter of 15.5-inches.

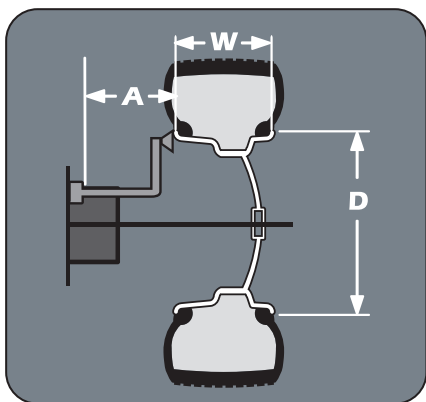


Figure 29 - A, W, and D Tire Dimensions

#### A2 = Offset

The distance measured from the balancer ("0" on offset arm) to outer plane of the rim (outer weight location). Used only for adhesive weight location.

#### D2 = Diameter

The diameter as measured at the A2 weight location. Used only for adhesive weight location.

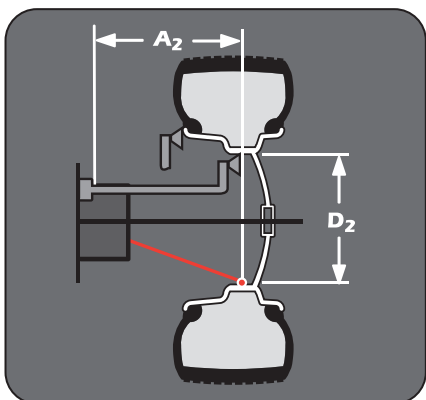


Figure 30 - A2 and D2 Tire Dimensions

## Basic Wheel Data Entry

**1.** Direct Select™ an inboard weight location (Clip 1, or T1 Tape) and an outboard weight location (T2 Tape, T3 Tape or Clip 2).

**2.** Position offset arm at clip weight location; wait for BEEP (A & D enters automatically).

**If the T2 Tape location is selected**, then move the offset arm from the clip weight location to the inner area of the wheel; up against the rim at the outboard weight placement location; wait for BEEP (A2 & D2 enters automatically).

**3.** Return offset arm to the home position.

**4.** For Automatic Measurement — Lower balancer hood to enter the W measurement automatically using the hood sonar (width sensor) and spin wheel.

For Manual Entry — Use plastic calipers to measure wheel width. Press W key/icon. Use keypad to enter Width value (between 2.0 and 20.0 inches)

## Entering Wheel Dimensions Manually

Information entered into the balancer software for A, W, and D can be changed anytime during a balancing procedure by entering the measurements manually. The balancer will recalculate weights and positions based on the new measurements.

### Wheel Offset - A

1. Press the A (wheel offset) icon.
2. Position offset arm at weight location on wheel and read the number on the offset arm gauge, at the cabinet (this is the correct offset A DIM).
3. Using the keypad, enter the A measurement value. On touchscreen models, include the decimal.

### Wheel Diameter - D

1. Press the D (wheel diameter) icon.
2. Inspect mounted tire sidewall to determine the exact diameter that is printed on the tire.
3. Using the keypad, enter the D measurement value to match the tire sidewall size. On touchscreen models, include the decimal.

**Note:** Auto entry is the preferred method for entering A2 and D2. However, on control panel models to manually enter A2, press Shift+A and to enter D2, press Shift+D. (see figure 30)

### Wheel Width - W

1. Press the W (wheel width) icon.
2. Use the plastic calipers provided with the wheel balancer to measure the wheel width. (see figure 31)



Figure 31 - Caliper Placement On Wheel

3. Using the keypad, enter the W measurement value to match measured caliper width of mounted rim. On touchscreen models, include the decimal.

## Balancing A Wheel Using Direct Select™

A variety of wheel configurations can be balanced using this wheel balancer. Read through this section, it will help in determining which balancing mode and options are best suited for certain wheel assemblies.

**Remember:** As with any balancing procedure, first remove any weights attached to the wheel, inspect the tire and wheel, and select the most appropriate balancer mounting method before beginning.

### Dynamic Balancing




Choose a dynamic balance to balance a wheel using two planes for correction. Select the weight option that best fits the available weight locations on the rim.

**Clip-on Weights** - The standard default; used for most passenger tire/wheel assemblies using the most common location for corrective weights. Clip-on weights are placed on the inner (inboard) and outer (outboard) rim flanges.

**ALUS (Aluminum Wheels)** - To balance aluminium wheels you usually use a self-adhesive weight location that is positioned differently from the clip-on weight position(s) used in standard balancing. Be sure to use the appropriate wheel data entry method since the balancer calculates unbalance values based on the wheel dimension measurements (DIM) entered for the tire/wheel assembly.

**Note:** When the machine is switched ON, a standard dynamic balance using clip-on weight locations is the default setting.

## Static Balancing

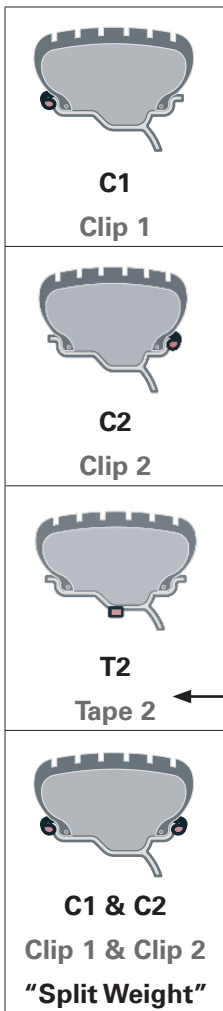

Choose a static balance to balance a wheel using one plane for correction. Place the single corrective weight at top-dead-center (12 o'clock) on either flange, at the center of the rim channel, placed inward either side, or split on either sides.

**Note:** When in static mode, you only need to input the DIAMETER wheel measurement.


**Important:** In **Static Mode**, you select either **C1** or **T2**.

If **C1** selected, measure to the Rim Flange and place weight at rim flange, 12 o'clock position.

If **T2** selected, measure to T2 location (center of rim), place weight at T2, laser dot position.

**Need to measure C1 then T2**

**Patch Weight Balance (if equipped)** - Use a static patch weight balance when there is a very large unbalance in a tire assembly or if a very large tire has a large unbalance. A weighted balance pad (patch weight) is placed inside the tire in the center to compensate for the large unbalance.

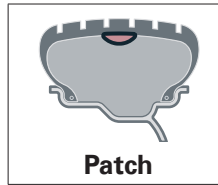

Direct Select Weight position **Patch** (weight location illuminates). At this location place the corrective weight amount at top-dead-center.

Have the following items handy: measuring tape and various patch weight sizes.


**Note:** Before proceeding with Patch Weight Balance, it is recommended that you use the Match Balance (Optimization) - If Equipped procedure first, see page 37, in order to use the smallest patch weight.



**The Patch Weight Balance involves the loosening of tire beads and the inflation of a tire. Training is necessary in tire changer operation and understanding the dangers involved during bead seating and tire inflation before attempting this stage of the Patch Weight Balance procedure. Read the operators manual supplied with the tire changer and consult a supervisor.**

The patch weight balance steps are as follows:

**1.** Direct Select™ weight position Patch. The balancer automatically sets itself for a static balance.

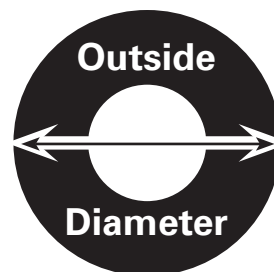

**2.** Measure the outside tire diameter, see figure 34, and enter this diameter manually using the keypad.

Figure 34 - Measure Outside Tire Diameter

**3.** Spin the wheel.

**4.** Rotate the wheel until the center weight position bar highlights. Next, mark the tire and rim at 12 o'clock. Then remove the wheel assembly from the machine.


**5.** Disassemble the tire and rim. Place patch weight in the tire at location marked on the tire. Reassemble tire and rim matching the marks on the tire and rim.

**6.** Complete by balancing the wheel assembly following normal procedures.

## Corrective Weight Placement

After the wheel spins and unbalances are measured and displayed, the corrective weight amount appears on the weight display windows for inboard and outboard weight locations. Bars appear on either side of the wheel cross-section graphic to aid in positioning the wheel for corrective weight at the application point.

After a measurement cycle, if not using auto lock, rotate wheel until the center weight position bar blinks, indicating the correct weight placement position is at top-dead-center. If the unbalance is less than the chosen threshold value, 000 appears instead of an unbalance value to indicate that, on that particular side, the wheel is in tolerance.

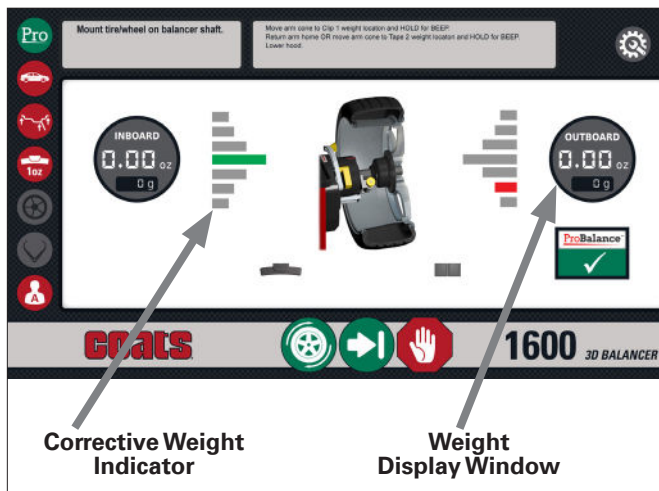

## Behind Spoke Mode

"Splitting" the T2 Tape corrective weight amount is used to hide the adhesive weight behind two rim spokes.

**1.** When the unbalance is displayed, rotate wheel until inboard center bar blinks. Attach inboard corrective weight at top-dead-center.

**2.** Press NEXT to rotate wheel until outboard center bar blinks.

**3.** Select the Behind Spoke icon to begin the behind spoke animation sequence. A SPOKE 1 icon will display on the dashboard.

**4.** Rotate wheel toward front until the first spoke is at the laser dot; press SPOKE 1. Now a SPOKE 2 icon will display on the dashboard.

**5.** Rotate wheel toward rear until the second spoke is at the laser dot; press SPOKE 2. Now at the spoke 2 location, the laser dot stops blinking.



Figure 35 - Spoke 1 and Spoke 2 Locations On Either Side Of Original Outboard Weight Location

**6.** Attach the spoke 2 outboard corrective weight at the laser dot behind spoke 2.

**7.** Press NEXT to rotate wheel to spoke 1 location.

**8.** Attach the spoke 1 outboard corrective weight at laser dot behind spoke 1; then press NEXT.

**9.** Press SPIN to check tire/wheel balance.




## LED Bar & Switch Operation (1600 if equipped)

If equipped (1600 model) an LED Bar is installed in the bottom of the Motor Shroud where shown below. The LED Bar operates when the Over-Ride Switch is in the **ON** position and the Hood is **UP**. This LED Bar illuminates the wheel inside plane to aid in weight placement. When the Hood is lowered, the LED Bar will turn OFF.




### **Hood Damper (1600 if equipped)**

If equipped (1600 model) a Hood Damper is installed between the Chassis and Hood Bar Cam. This Damper helps prevent the Hood from slamming down when lowered. The Damper will also aid in achieving better Sonar Readings and extend the life of the Sonar Module, which is attached to the Hood.

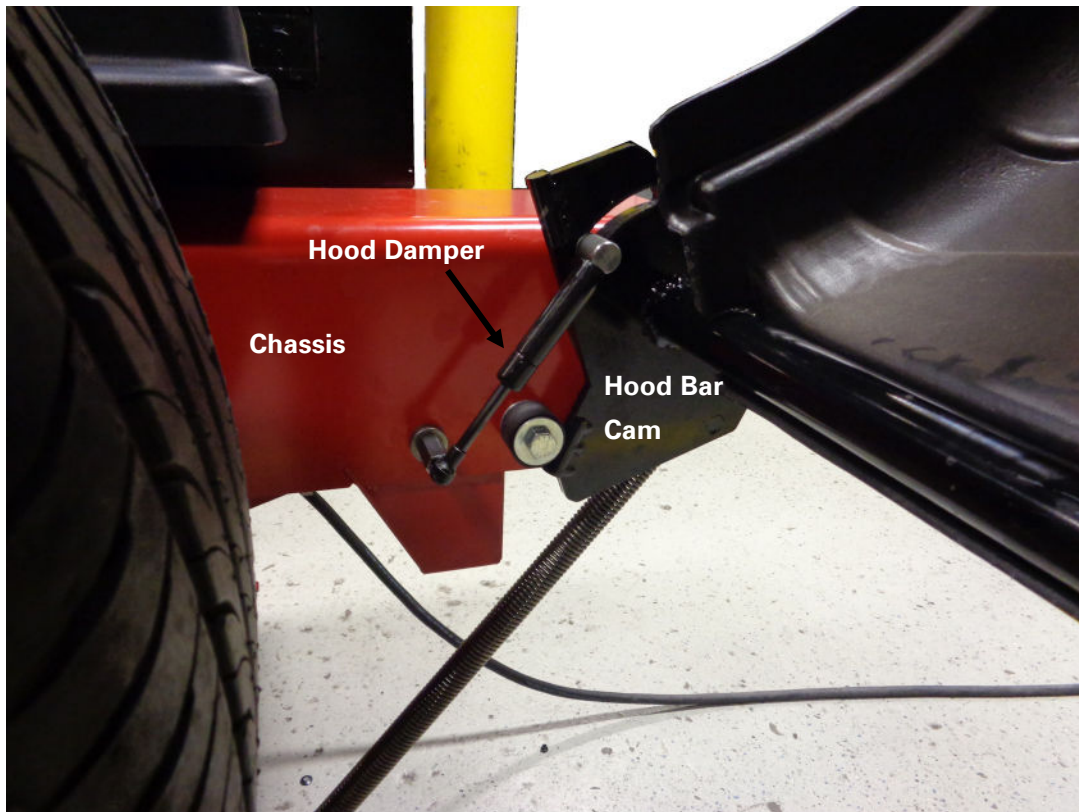

**NOTE:** Keep the damper spring shaft clean of contaminants by periodically wiping with a clean rag. **DO NOT** apply any lubricant to the shaft.

**NOTE:** Ensure that the Hood Spring is attached in the Upper Chassis slot.

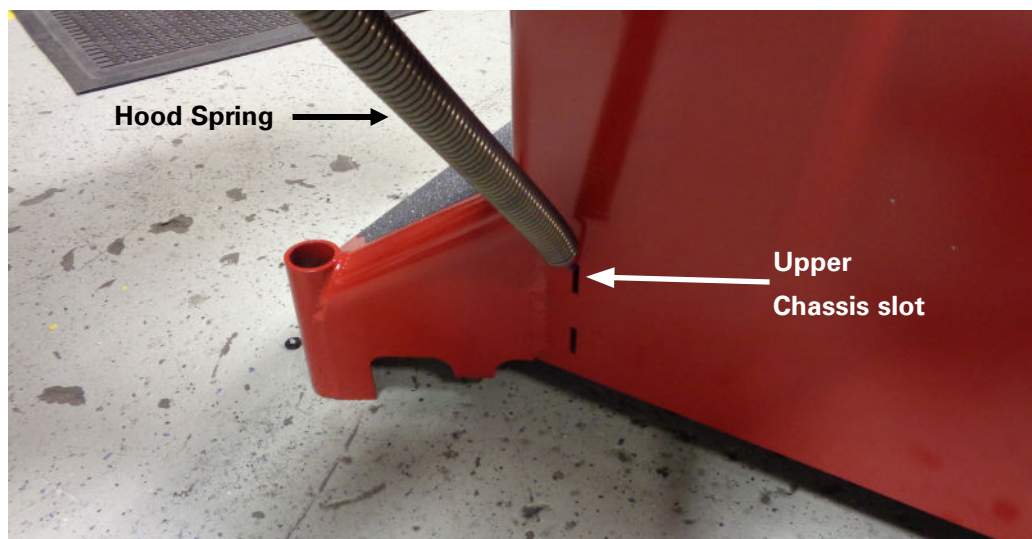

## ProBalance Technology™ On Touchscreen Models

Any excessive residual unbalance is detected when using ProBalance Technology mode, see Balance Mode Icons, page 13. When activated, an ON (enabled) icon will display on the dashboard, see figure 36.

**Note:** ProBalance is only available when the balancer is set in car mode and round off mode.



Figure 36 - ProBalance Technology Enabled Icon

**1.** After correcting for dynamic unbalance, and excessive residual unbalance is detected over tolerance, then a PUSH icon button will display on the dashboard (figure 37). Press the button.

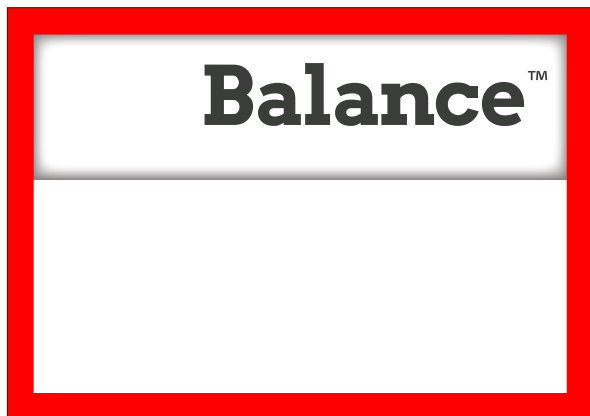


Figure 37 - Press To Correct For Excessive Residual Unbalance

**2.** The balancer stops and automatically positions the wheel at the ProBalance correction location. Now attach the specified corrective weight amount (figure 38) at the 12 o'clock position in the center of the rim channel (as displayed in graphic on wheel balancer).

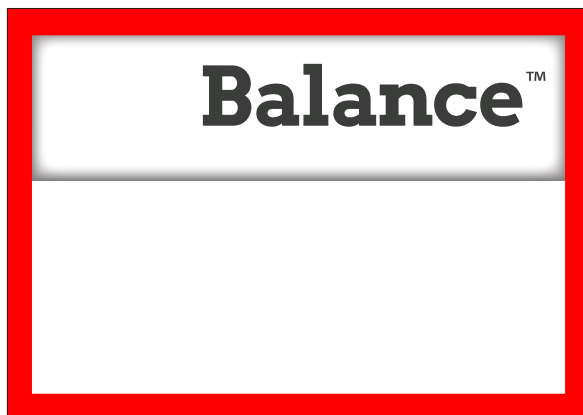


Figure 38 - ProBalance Corrective Weight Amount

**3.** Respin tire/wheel to check balance. If the weight amount and placement are correct, a check will appear.



Figure 39 - ProBalance Technology Success Button

## Match Balance (Optimization) - If Equipped



**The Match Balance involves the loosening of tire beads and the inflation of a tire. Training is necessary in tire changer operation and understanding the dangers involved during bead seating and tire inflation before attempting this stage of the Match Balance procedure. Read the operators manual supplied with the tire changer and consult a supervisor.**

On certain models, the Match Balance (Tire/Rim Weight Optimization) procedure is used to determine the best mating of tire and rim that will result in the least amount of total unbalance of the assembly. It requires two spins and two rotations of the tire on the rim. Match Balance may be needed when:

- The customer complains of ride problems.
- The balancer calls for Total Static weights in excess of 3 ounces (85 grams) on passenger car tires.

**Note:** A high unbalance may indicate the improper mounting of the assembly on the balancer, or a rim that is out of round or misformed, or a tire with a bubble or other problem. If the unbalance is excessive, it may be prudent to replace the rim, the tire, or both. If either is replaced, do not continue with Match Balance. Balance the new tire and rim and evaluate the readings.

## Match Balance Mode

If you choose to use Match Balance to correct for a condition, such as a large static unbalance, then **follow the information box instructions for the MATCH BALANCE procedure as outlined in the following steps.**

**Note:** Use this procedure only after the wheel has spun and the corrective weight amount is displayed.

**Note:** Use the total static display option. See BALANCE OPTIONS, page 11, for further details.

**\*For the 1500, 1st press Stop/Exit to unlock the wheel.**

**1.** Press and hold the SHIFT key and press 5 to select the Match Balance mode; a " 1 " will appear in the outboard weight display.

**2.** Raise the hood and rotate the wheel until the valve stem is at top-dead-center. Mark the tire sidewall at the valve stem.

**3.** Press 1 on the control panel; a " 2 " will appear in the outboard weight display.

**4.** Remove the wheel assembly from the balancer.

**5.** Using a tire changer, rotate the tire 180 degrees on the rim.

**6.** Remount wheel assembly on the balancer. Press 2 on the control panel; a " 3 " will appear in the outboard weight display.

**7.** Lower the hood and press START. The wheel spins.

**8.** When the wheel stops spinning, raise the hood and rotate the wheel until the valve stem is at top-dead-center. **\* For the 1500, you will have to overpower the inverter lock to complete step 8.**

**9.** Press 4 on the control panel.

Weight amounts appear on the control panel. The amount in the inboard weight display is the weight imbalance for the rim. The amount in the outboard weight display is the weight imbalance for the tire. Use these weight amounts to determine the suitability of the rim or tire. **\*For the 1500, you must press Next until the wheel indexes to the outboard position.**

**Note:** If either the rim or the tire weight amount is close to zero or zero then using Match Balance will not affect the total unbalance of the assembly.

**10.** Rotate the wheel until the outboard weight position bar flashes. Mark the tire at top-dead-center.

**11.** Remove wheel assembly from balancer.

**12.** Using a tire changer, rotate the tire until the mark is aligned with the valve stem.

**13.** Remount the wheel assembly on the balancer.

**14.** Press NEXT or START to exit Match Balance. Select a balancing mode and balance wheel assembly.



## Calibration

### Machine Calibration

1. Enter the MACHINE CALIBRATION mode.
2. Enter the D dimension (include decimal point, example: 16.0 for a 16-inch wheel). Press ENTER.
3. Lower the hood and press SPIN.
4. After spin, raise the hood. Attach 4-ounce calibration weight to the outside flange at top-dead-center.

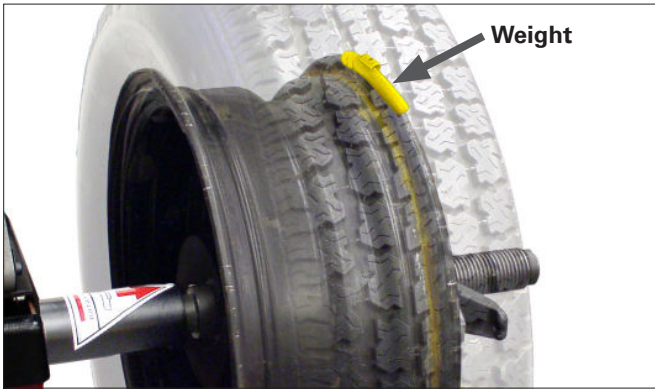


Figure 40 - Calibration Weight On Outside Flange At Top-Dead-Center

5. Lower the hood and press SPIN

**Important:** It is critical that the inner weight be placed accurately to achieve proper calibration. If the calibration weight is not moved from the outside flange directly across to the inside flange, an inner weight placement error will occur. To correct, follow the balancer instructions.

6. After spin, raise the hood. Move the 4-ounce calibration weight directly across and attach it on the inside flange at top-dead-center (12 o'clock position).



Figure 41 - Calibration Weight Moved (Directly Across) To Inside Flange

7. Lower the hood and press SPIN.

**Note:** Rotate laser dot toward inner flange.

8. After spin, raise the hood. Rotate wheel to line up/center of 4-ounce calibration weight with laser dot. Hold position while pressing NEXT.

9. Press NEXT; then press EXIT.

**Note:** On control panel models complete the machine calibration procedure. Then press and hold the SHIFT key and press 3 to access the CAL ARM mode.

10. Bring the cone edge of the arm precisely to the outer edge of the faceplate and hold it there (through step 12) while pressing the NEXT. (If necessary to reach the faceplate accurately, loosen the calibration wheel temporarily.)

11. With arm cone still at the edge of the faceplate, enter the A dimension (include decimal point) read off the arm gauge; see figure 41. Press ENTER.

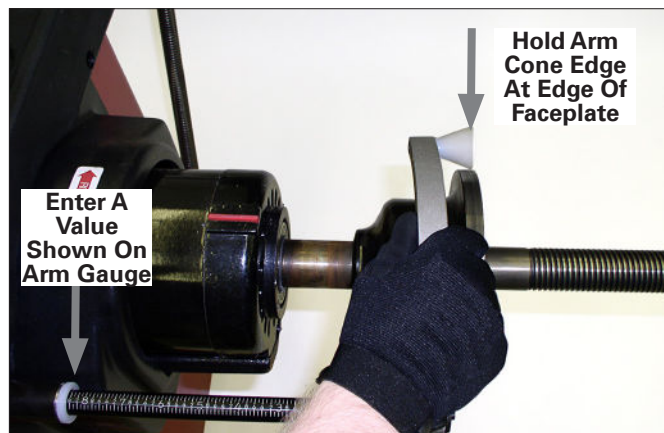


Figure 42 - While Holding Arm Cone at Faceplate Edge, Enter A

12. Move arm to its home position and press NEXT.

13. Move arm to clip-on weight location on rim flange and hold it there (through step 16). Wait for voltage reading to stabilize, then press NEXT.

14. With arm still at clip-on weight location, enter the D dimension (16.0 for a 16-inch wheel) that is the diameter of the tire. Press NEXT.

15. While still holding the arm at the wheel's clip-on weight location, enter the A dimension (include decimal point) read off the arm gauge. Press ENTER

16. Return the arm to home position; calibration is complete. Press EXIT. Press STOP & EXIT to go back to the main screen.



## Maintenance Instructions



Use caution, this is an electrical device. Exposing the balancer to water, either by hose or bucket, or by exposure to rain or snow, may cause risk of shock or electrocution to operator or bystanders. Place, store, and operate the balancer only in a dry, sheltered location.



Do not hose down with water or bucket wash the balancer. Extensive damage to the balancer will result. Sensitive electronic components, wiring harnesses, and other devices housed in the balancer are not intended to be exposed to water.

The balancer requires only minor maintenance to keep the unit operating properly.

### 1. Cleaning the Touch Screen Display

#### NOTE:

- MAKE SURE THE LCD DISPLAY IS TURNED OFF.
- NEVER SPRAY OR POUR ANY LIQUID DIRECTLY ONTO THE SCREEN OR CASE.

#### To clean the screen:

- Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.


- If the screen is still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

#### To clean the case:

- Use a soft, dry cloth.
- If the case is still not clean, apply a small amount of non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

#### Disclaimer

- The manufacturer of this display does not recommend the use of any ammonia or alcohol-based cleaners on the LCD display screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the LCD display.
- The manufacturer of this display will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.
- Touch screen performance may be reduced with the use of thick gloves.
- **ONLY** use fingers to make contact with the screen.

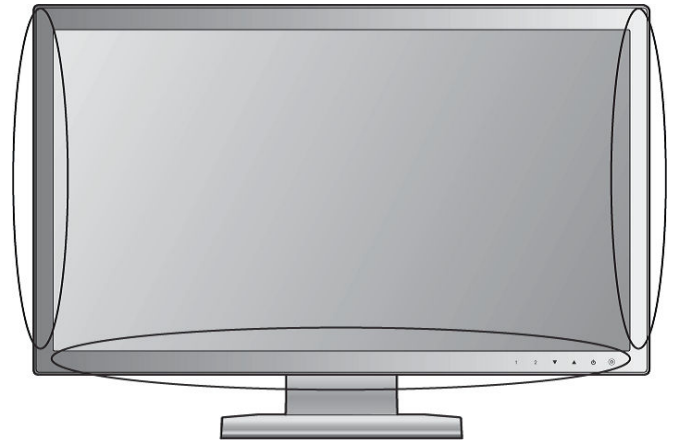

**NOTE:** Always ensure there are no foreign objects within the encircled areas (ViewSonic TD2220 Only)

**2.** Keep the adapters, cones, faceplate, threaded shaft, pressure cup, and hub nut clean. Grease and dirt buildup will cause inaccurate balancing and premature wear. Clean these items at least once a day with a vaporizing solvent.

**3.** Clean weight tray and any accessory studs, pegs, or storage shelves with a mild detergent. Weights stored in a dirty tray may pick up grease and dirt which may keep them from securely attaching to the wheel.

**4.** Keep the area around and under the balancer clear. Remove any tools or other items that are leaning against the balancer. Remove any items that may cause the balancer to not sit level. Be particularly cautious of new or used wheel weights on the floor, as they may cause personal injury due to falls.

**5.** Use only COATS® accessories. Accessories from other manufacturers may not fit or function properly, and may damage the balancer.

**6.** The A & D line laser maintenance is limited to battery replacement and line adjustment using the set screws.

**7.** To keep the balancer lasers in compliance, do not maintenance them.

## Touchscreen Panel Testing - Gloves

Projected capacitive touchscreen technology relies on conductive touch for function, and gloved hands reduce conductivity of touch. Hennessy Engineering tested common gloves for function with the ViewSonic TD2230 display.

The gloves/materials tested were as follows:

- Cotton Jersey



- Soiled Synthetic Leather Work Gloves (Oil/Grease/Metal Chips)



- Clean Synthetic Leather Work Gloves



- Rubber-Coated Cloth



- Leather work gloves with grease on finger pads



- Rag with heavy grease



- Nitrile (6mil thickness)



All tested gloves successfully activated the ViewSonic TD2230 touchscreen. Care must be taken, as glove material thickness increases, to ensure the pad of the finger is placed on the touchscreen panel, as opposed to the tip of the finger.

If reduced touch performance is experienced with the use of common gloves, conductive fingertip gloves are available from most industrial supply stores.

## Diagnostic Procedures

### After Balance Vibration Problems

If vibration is still present after balancing the wheels and driving the vehicle on smooth pavement, remove the wheels and recheck the balance. If a wheel is unbalance the cause maybe:

- Wheel was not mounted/centered correctly on the balancer.
- A weight has come off the wheel (possibly the wrong clip style). Remove the other weights from the wheel and rebalance.
- Foreign material inside the tire. Remove the tire from the wheel, remove the foreign material, and remount. Remove wheel weights and rebalance the wheel.
- Stones or other foreign objects caught in the tire tread or rim. Remove the objects. Check and rebalance if needed.

If the balancer still indicates the wheels are balanced to within 0.05 ounces (1.42 grams) on both inner and outer displays, the problem is not in the balance of the wheels. Check the following possible sources of vibration:

- Tire pressure. Bring all tires up to the recommended PSI.
- Radial or lateral runout in the tire or wheel. Replace the damaged part.
- Unbalance in wheel covers or trim rings. Remove the wheel covers or trim rings and test drive. If the vibration is gone, remove the shaft and use an appropriate adapter to mount the wheel to the balancer. Balance the wheel with the wheel cover or trim ring attached to the wheel.
- Incorrectly mounted tire and wheel. Remount correctly.
- Damaged rim bolt holes. Replace rim.
- Worn universal joints. Replace as required.
- Drive shaft unbalance or damaged. Balance, repair, or replace.
- Unbalance in brake rotor(s) or drum(s).
- Suspension out of alignment. Align the vehicle and replace any damaged or worn parts.

## Troubleshooting

A COATS® Service Technician may ask for information to help diagnose service concerns (please contact COATS directly at 1-800-688-9240 for the Certified Service Partner nearest you). Conveying this information to your service technician prior to servicing can help to expedite service to your equipment. Although much of the diagnostic information aids your COATS Service Technician, several remedies for balancer misfunctions are available to the operator.

**Error Messages** - One of the following error messages, shown in the display windows, may appear indicating a problem with the balancer.

**Note:** Always, exit error message and repeat the procedure to see if the error is eliminated.

Error	Description
<b>E1</b>	Spin up is too slow - Verify power supply to balancer and motor connection
<b>E2</b>	Spin up time too long - Check Wheel DIA and power supply - press STOP - EXIT
<b>E3</b>	No rotation signal - Check motor, encoder function and wiring -press STOP - EXIT
<b>E4</b>	Wheel rotation direction is reversed - Disconnect power and correct wiring
<b>E5</b>	Stop time too long - Verify power supply and motor connection - press STOP - EXIT
<b>E6</b>	Encoder is not connected or has failed - Disconnect power supply and repair
<b>E9</b>	Wheel coast speed is too slow
<b>E11</b>	User cancelled the operation
<b>E20</b>	Arm scale is out of range
<b>E24</b>	Lower hood to spin
<b>E25</b>	Loose hub nut. Tighten hub nut and respin
<b>E26</b>	CAL ERROR
<b>Err Hod</b>	Hood switch is not closed when machine cycle is started - Lower hood to spin - Verify hood switch
<b>Err Hub</b>	No load condition detected - Verify wheel mounted properly on the shaft - Check repeatability
<b>Err Ad</b>	No dimension input
<b>Inverter Error</b>	Inverter Fault-Please Wait

<b>Error</b>	<b>Description</b>
<b>100, N01, CAL</b>	Exceeded 5 degree range between placement of calibration weight from outside flange to inside flange.
<b>100, N02, CAL</b>	Calibration wheel is more than 1-ounce unbalance. Calibration is rejected.
<b>100, N03, CAL</b>	Calibration wheel is more than 0.25-ounce but less than 1-ounce unbalance. Calibration is stored, but with warning.

**Inverter Error** - An inverter error occurs when one of several fault conditions is detected by the inverter; such as, low line voltage, motor over temperature, motor overload or motor drive over temperature. The balancer will not respond to inputs until the fault condition is corrected. The balancer will clear this error as soon as possible and indicate that with the following message: Inverter Fault Cleared. Press Any Icon (key).

**Overload Protection** - The balancer's motor is overload protected per UL requirements. After 4 to 5 minutes the machine automatically resets itself; activating the fan motor. If this happens, notify your Certified Service Partner immediately.

**Important:** Allow the fan to cool the motor for at least 30 minutes before using the balancer so the overload protection is not tripped again.

**Notice:** No service is allowed on the A & D line laser, T2 or 12 o'clock laser by the customer.


**Notice:** This unit is to be serviced or repaired only by factory authorized technicians.


## Maintenance Interval Monitor

If equipped (1600 model) a Maintenance Interval monitor is programmed to count the number of spins since last reset. The interval can be set for **Light** use (8000 spins) or **Heavy** use (12000 spins).




When the selected spin count has been reached, the Settings Icon  will

change to  and when the operator touches it, the message below will appear.

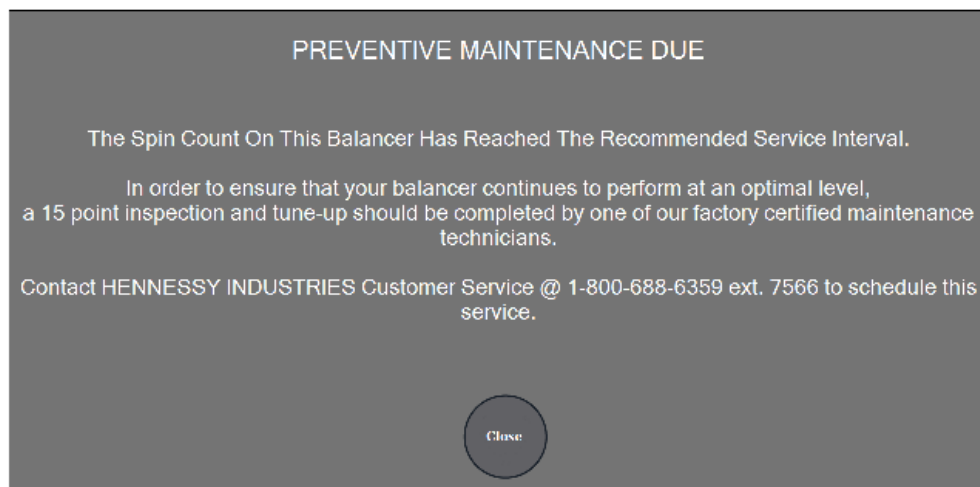

The operator then touches  to return to normal Balancer operation.

The  will display until the owner resets it for the next cycle of spin and pedal use monitoring.

It is up to the owner to call for Preventive Maintenance.





# COATS®

## Wheel Balancer Models 1300 2D, 1400 2D, 1500 3D & 1600 3D



Model 1300



Model 1400



Model 1500



Model 1600

### *Parts Identification*

READ these instructions before placing unit in service. KEEP these and other materials delivered with the unit in a binder near the machine for ease of reference by supervisors and operators.

**HENNESSY**  
**INDUSTRIES**

1601 J. P. Hennessy Drive, LaVergne, TN USA 37086 615/641-7533 800/688/6359 [www.coatsgarage.com](http://www.coatsgarage.com)  
HENNESSY INDUSTRIES LLC. Manufacturer of COATS®, AMMCO® and BADA® Automotive Service Equipment and Tools.

Manual Part No.: 85610676 12  
Revision: 2/20

## Parts Identification



The following pages include parts breakdowns with exploded view illustrations to help with ordering replacement or spare kits. Assemblies are noted where it is recommended that individual parts not be ordered separately. Note that the parts view illustrations are for multiple models and not all parts shown are on all models. Every effort is made to supply accurate exploded views, however, due to interim changes in manufacturing operations, some units may not be exactly as illustrated.

### Table of Contents


<b>Label Locations.....</b>	<b>3</b>
<b>Wheel Guard Assembly.....</b>	<b>4</b>
<b>Wheel Guard Hood Damper (1600 only) .....</b>	<b>5</b>
<b>Chassis Assembly .....</b>	<b>6</b>
<b>Distance Gauge Assembly .....</b>	<b>7</b>
<b>Motor Assembly .....</b>	<b>8 - 9</b>
<b>Motor Shroud w/Hood LED Bar &amp; Switch.....</b>	<b>9</b>
<b>1300/1400/1500/1600 Monitor Assemblies .</b>	<b>10 - 11</b>
<b>1300/1400 Non-Inverter Model .....</b>	<b>12 - 13</b>
<b>1500/1600 Inverter Models.....</b>	<b>14 - 15</b>

## Label Locations


Part Number	Description
8113927	Caution / Warning
8120446	Motor Rotation
85010088	MET Lab Compliance
85608653	Patent Notice
85608779	Electric Shock
85610662	Main, 1400/1500/1600
85610679	Warning
85610721	Nameplate-1600
85610729	Nameplate-1500
85610730	Nameplate-1400
85610932	Nameplate-1300
85610746	Laser Hazard
85610747	Explanatory
85610749	Certification
85611015	Pedal Ops
	(1600 Only - if equipped)
85611259	Reverse Pedal
	(1600 Only - if equipped)
85611016	Caution, Pinch Point
	(1600 Only - if equipped)
85611166	Clean, Screen
85611756	1300 QR Code
85611757	1400, 1500, 1600 QR Code

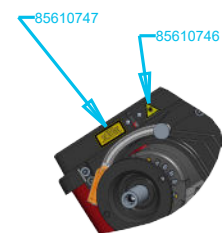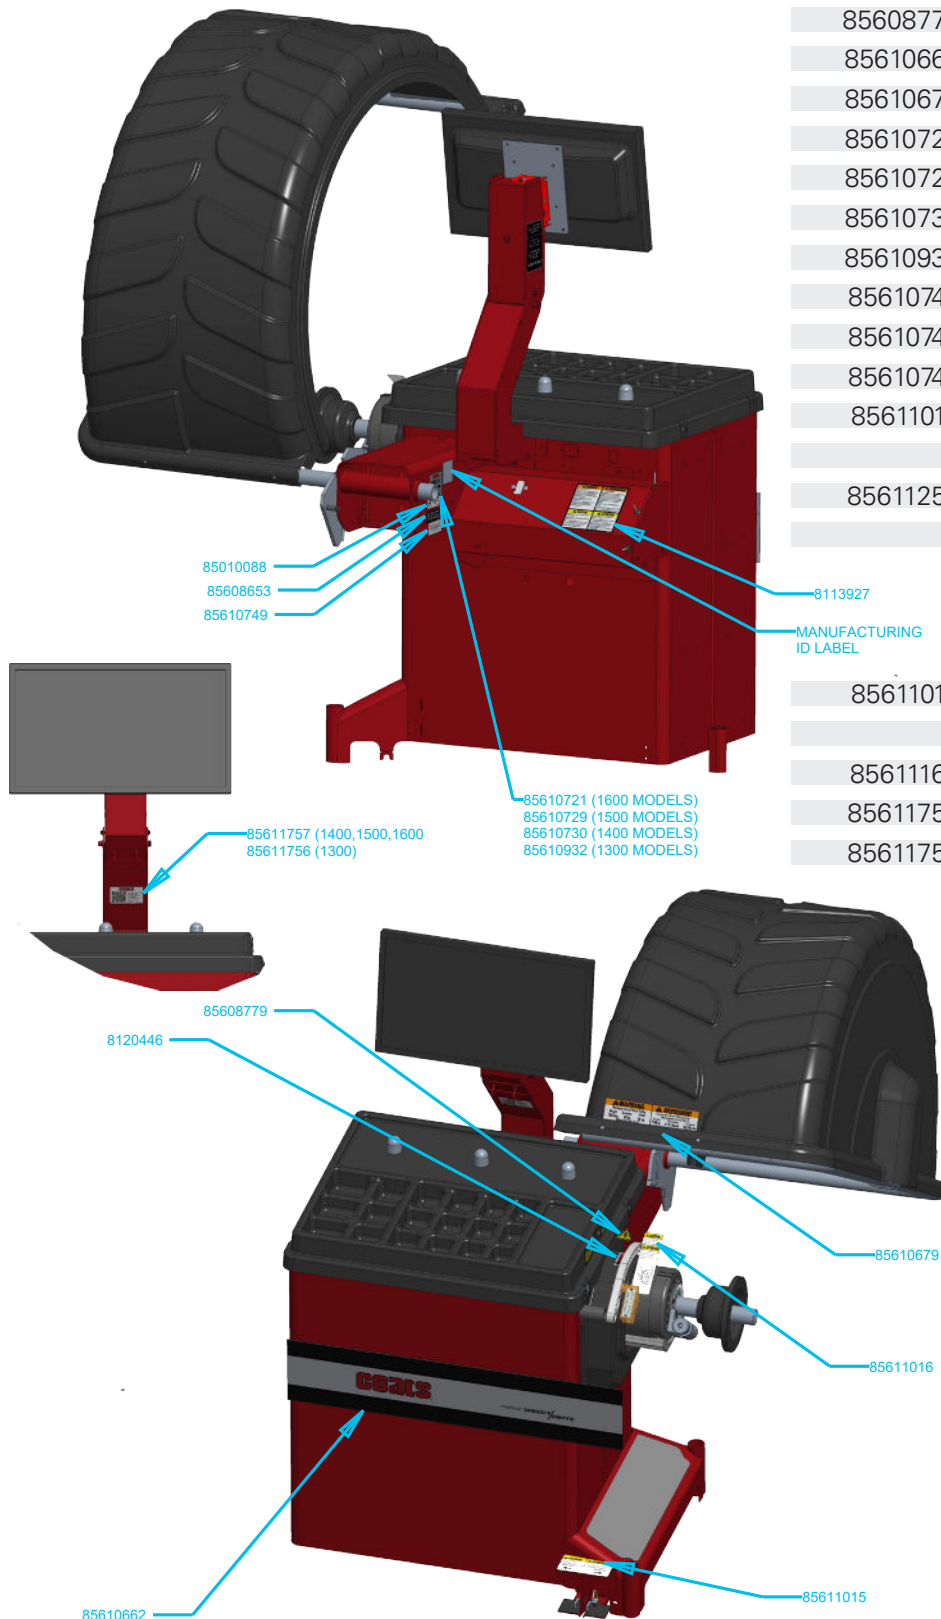

## Wheel Guard Assembly

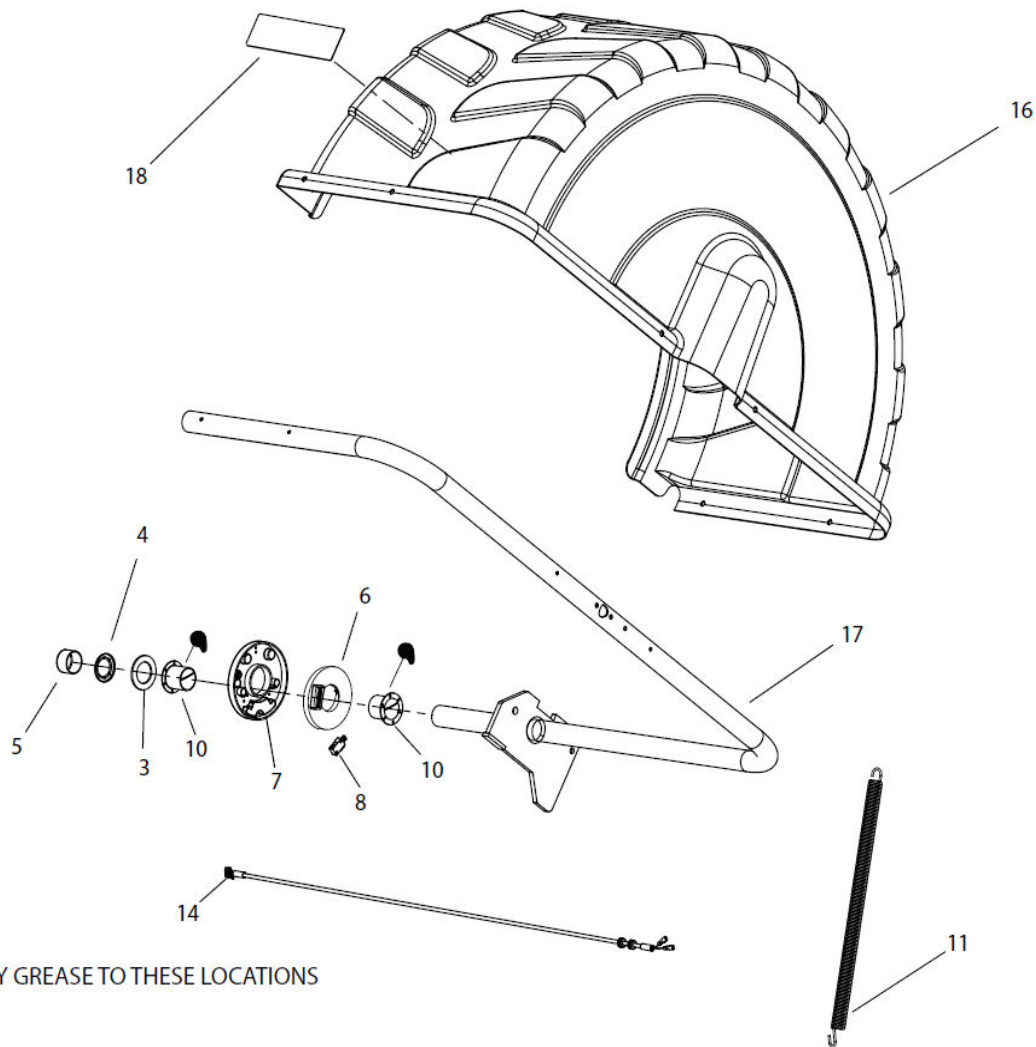


Item	Part No.	Description
1	8000745	1/4 Flat Washer
2	8109802	Screw, HHCS, 1/4-20 X 2.00
3	8109944	Washer - Hood Bar
4	8109945	Retainer - Washer 1 1/2"
5	85611317	Plug - Hood, w/Hole
6	8113332	Cam/Cover Hood Switch
7	8113333	Housing-Hood Switch
8	8113341	Switch-Micro, Limit
9	8181369	1/4-20 UNC Screw
10	8307014	Bearing - Flanged, Nylon
11	8308062	Spring - Hood, Extension
12	85000303	Bracket - Sonar
13	85000304	Sonar Module
14	85609820	Assy, Hood Switch Cable (1500 & 1600)
	85609868	Assy, Display Harness (1400 only)
	85610928	Assy, Display Harness (1300 only)
15	85610231	Cable-Sonar, Hood
16	85610517	Hood-Wheel
17	8114319	Weldment - Bar, Hood
18	85610679	Decal - Warning

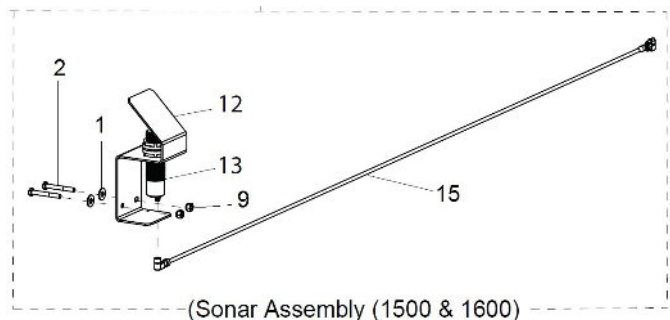




## Wheel Guard Hood Damper (1600 Only)

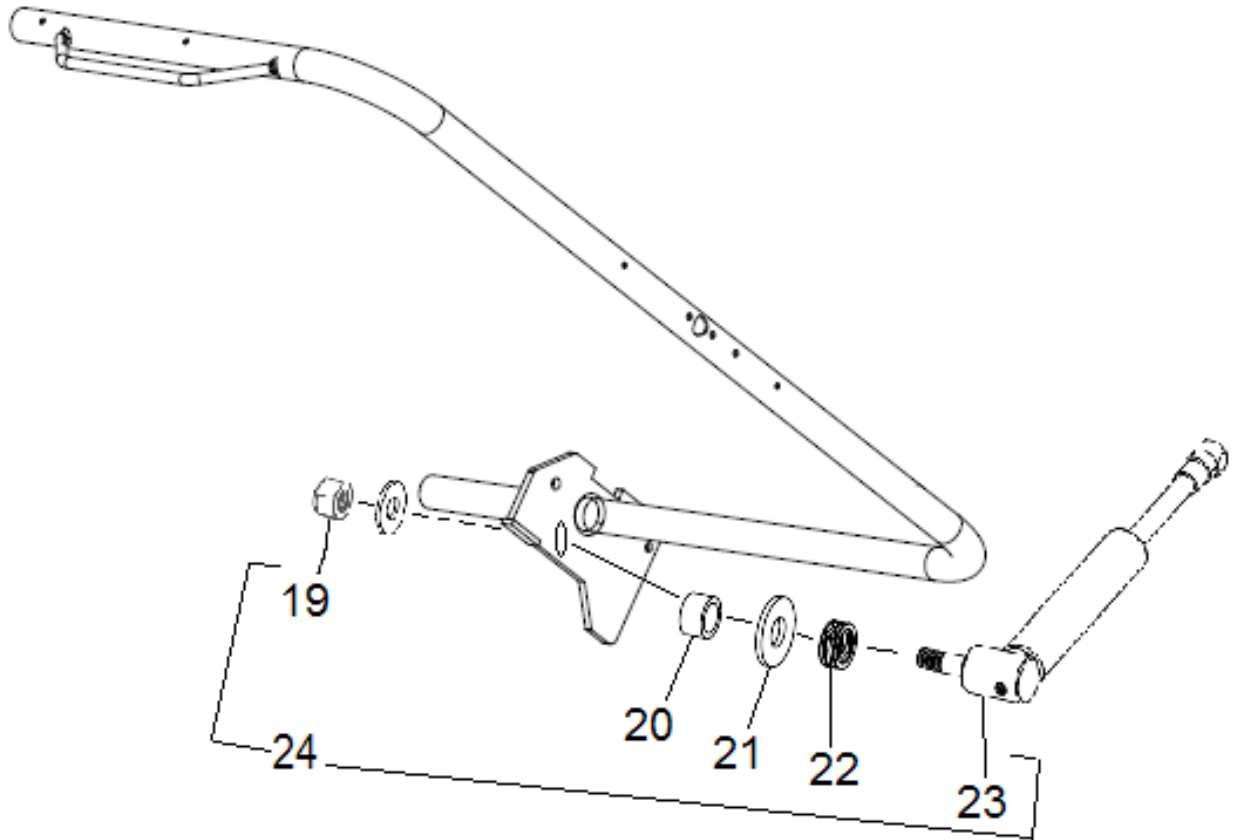

Item	Part No.	Description
19	8000525	Nut-Hex, Lk, 5/16-18
20	85610947	Bearing-Slve,Brnz
21	8000745	Flat Washer - 1/4
22	85611227	Spring - Comp, Hi-Load
23	85610951	Damper - Hood
24	85611231	Damper-Asm,Kit


## Chassis Assembly

Item	Part No.	Description
1	8106301	Screw-1/4-20 X .75
2	8106303	Nut - 3/8 - 16 UNC
3	8106304	Fastener - Skin, Tinnerman
4	85610661	Grommet-Inverter Port
5	8108727	Rod - Threaded
6	8110560	Screw - 8-32 UNC X .75" Lg.
7	8111029	Cover - Rear Harness
8	81142663	Assembly - Piezo
9	8301084	Nut, #8-32 Kep
10	8301120	Screw - HHCS
11	8301121	Washer, Plain .562idx1.375odx.109
12	8301112	1/2-13 Hex Nylock Nut
13	8309008	Molding - Stop, Hood
14	85606581	Grommet - Flex
15	85608850	Stud-Weight Tray
16	85610698	Bracket - Anti Tilt
17	85610571	Cover-Computer, Monitor

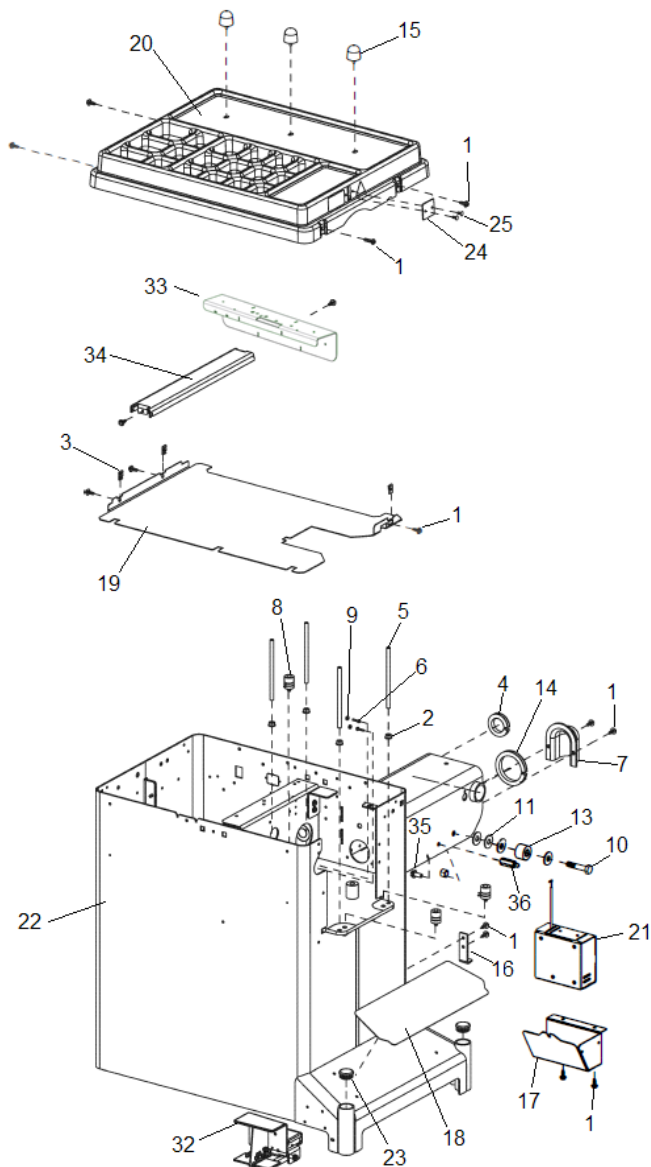


Item	Part No.	Description
18	85610578	Pad, Anti-Skid
19	85610583	Shield - Weight Tray
20	85610587	Assy-Tray, Laser Shield (Includes 85610588 & 85610274)
21	85611245	Assy-Display Computer
22	85610596	WLD MNT - Chassis, Split, Skirted
23	85610733	Cap - Plug
24	85610962	Black Shield (1300 & 1400)
	85610588	Laser Shield (1500 & 1600)
25	85610274	Plastic Rivet
26	85611020	Pedal Switch Harness
27	929195	Compression Spring
28	85609746	Foot Pedal Switch
29	8102278	Cotter Pin
30	85611015	Pedal Ops Decal
31	85611013	Pedal Grip Pad
32	85611000	Pedal Assembly
33	85610570	Tray Support Bracket
34	85610584	Tray Stringer
35	8106302	Screw, HHCS, 3/8-16X7/8, WHZLK, G5
36	85610944	Standoff-Stud, Ball, 10mm

Pedal Assembly (1600 Only - if equipped)

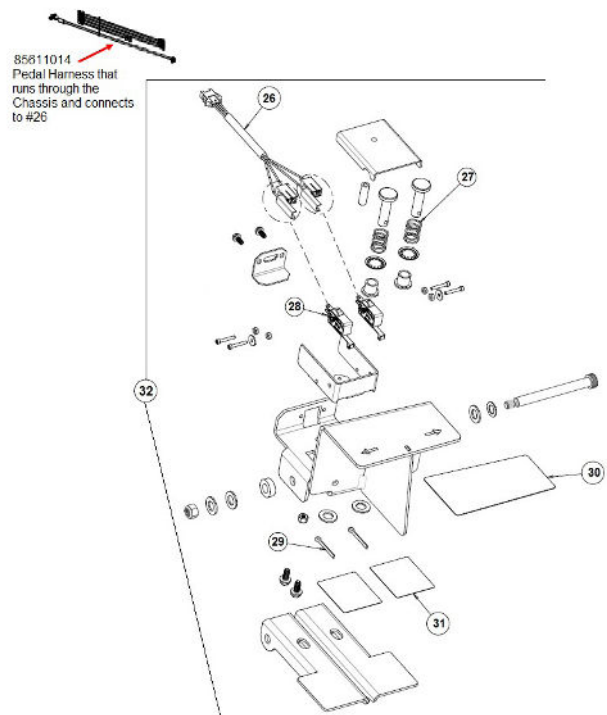


## Distance Gauge Assembly


Item	Part No.	Description	Item	Part No.	Description
1	8114254	A & D Pendulum	18	8111173	1/4-20 x 1-1/2 FHS Screw
2	8114251	A & D Bracket	19	8114380	Compression Spring
3	85609866	A & D Pots with Harness Assy	20	8114379	SHC 1/4-20 x 1-1/4 lg. Screw
4	85000730	Distance Rod Bushing	21	8114264	Hose Clamp
5	80180018	A & D Rod	22	8114255	A & D Tube
6	8114258	A & D Pot Bracket	23	85000731	Hex HD Cap Screw
7	8301084	#8-32 Kep Nut	24	8111032	1/4 Fender Washer
8	80180017	Distance Pot Pulley	25	8114373	Arm
9	80180022	String	26	903174	Retaining Ring
10	8114403	Pulley Collar	27	8301534	1/4-20 x 7/8 HHC Screw
11	8114404	10-24 x 3/4 SHSS Screw	28	8143169	1/4-20 Whiz Lock Hex Nut
12	80180020	Spring Bracket, 3MM Screw	29	8111542	#8-32 X 5/8" SEM Screw
13	80180021	Washer 3MM	30	8100964	1 1/4-inch Retaining Ring
14	80180019	String Bracket	31	85000732	A&D Arm Tube Assembly Kit
15	80180023	Spring	32	85609880	M6 x 12mm SHSSCP Screw
16	8114253	Cone			
17	85009229	Line Laser			

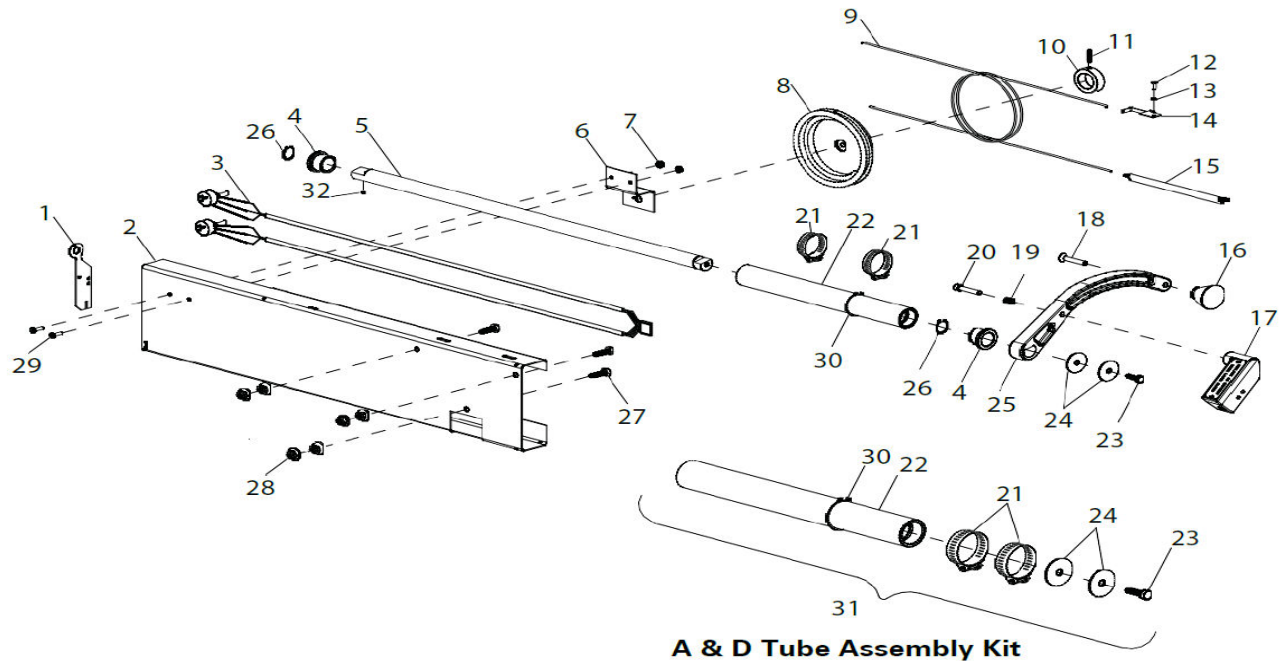

## Motor Assembly

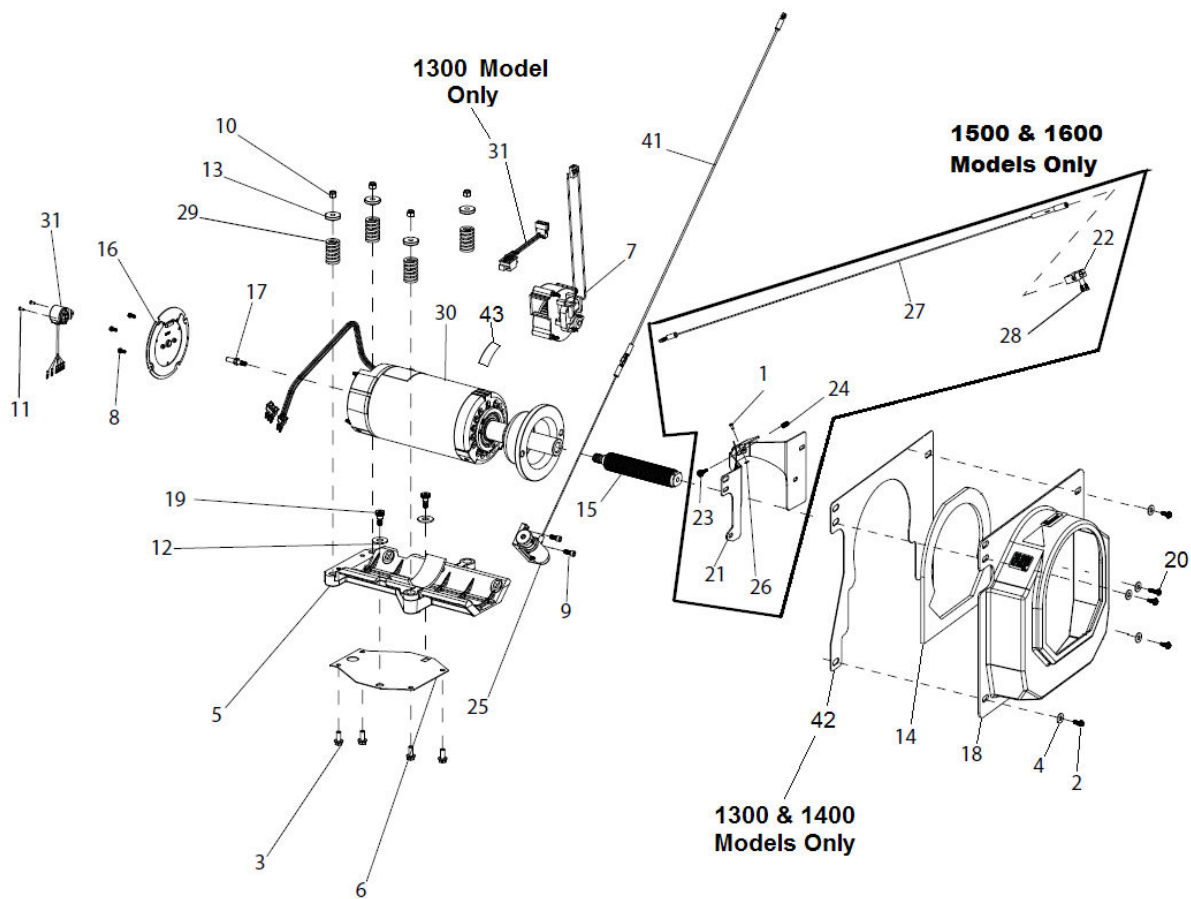


## Rotary Laser Assembly

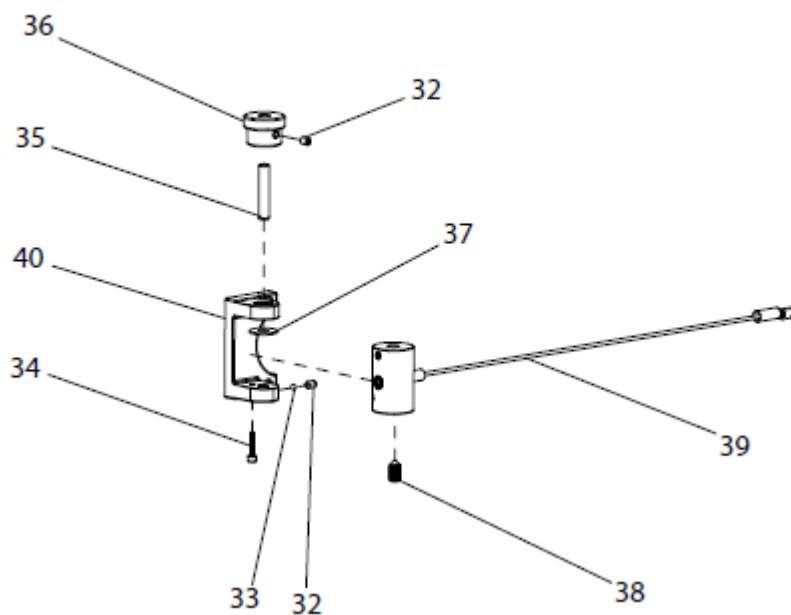

## Motor & Rotary Laser Assembly

Item	Part No.	Description	Item	Part No.	Description
1	920615	8-32 X .375 BHCS	23	85610273	Screw-Thumb, #8-32 X 7/8
2	8106301	Screw-1/4-20 X .75	24	85610275	Spring,.360 X 3/4"
3	8106302	Screw - HSWF, 3/8-16 X 7/8	25	85610280	Laser Assy-Rotary, Jst
4	8107635	Washer-Flat, 5/16	26	85610282	Washer, #8, Hard Fiber
5	8110430	Ass'y. - Cradle	27	85610536	Assy-Cable, Line, Laser
6	8112182	Flex - Plate	28	85610579	Screw-#8-32X3/8 SHCS
7	8114265	Assembly - Fan	29	85610682	Spring - Piezo, Precision
8	8144110	Screw - Hex Washer Head	30	85010010	Motor Replacement Kit (40mm)
9	8182149	Screw - SHC 5/16-18 X ¾	31	85610094	Encoder (1500 & 1600)
10	8301035	Nut-3/8-16 Hex Nyloc		8110923	Encoder (1400)
11	8301067	Screw - #6-32 PHIL		8308817	Rotary Shutter (1400)
12	8301121	Washer, Plain .562 ID		8110923	Encoder Assembly (1300)
13	8308036	Retainer - Piezo Spring	32	902308	Set Screw
14	8308536	Motor Gasket	33	906407	Ball-Nyln, .187
15	85009204	Shaft-Extension, 40MM	34	928367	Screw, SHCS 10-24 UNC
16	85009970	Cover - Rear End Bell (1500 & 1600)	35	8114237	Dowel 3/8 X 2" LG.
	8308513	Cover - Rear End Bell (1400)	36	8114241	Knob
17	85009971	Shaft - Encoder Drive	37	8114242	Plastic Washer
18	85610748	Shroud-Motor, Assy (1400, 1500, 1600)	38	85610252	Screw-Set, Cn Pt,3/816,.75"LG
	85608997	Shroud-Motor, Assy (1300)	39	85610268	Cylinder Assy-Laser, Rotary
19	85609427	Bolt-SHSS, 1/2 X 3/8-16	40	85610399	Bracket-Assy, W/Brg
20	85609826	Screw-HWHMS, 1/4-20	41	85610265	Cable Assy - 36", JST
21	85610269	Bracket-Inboard Laser Posn	42	85609063	Motor Cover Shield (1300 & 1400)
22	85610271	Mount Block-12mm Dia Laser	43	85611016	Caution, Pinch Point (1600 - if equipped)


## Motor Shroud (1600 with Hood LED Bar & Switch)

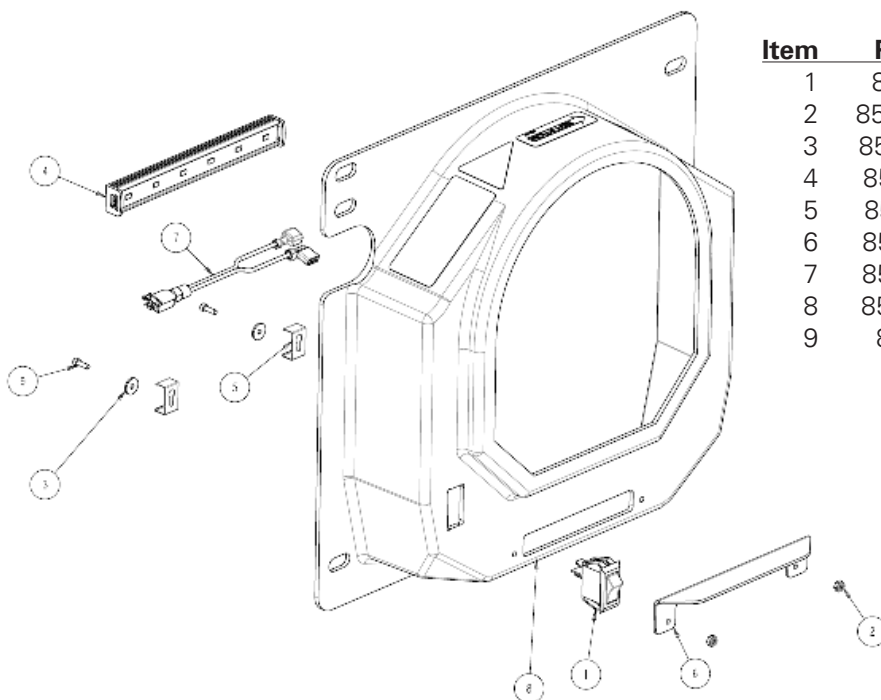


Item	Part No.	Description
1	8305802	Switch-ON/OFF
2	85000357	Nut - Nylok #4-40
3	85609410	Washer-#4 Flat,.125IDX.438OD
4	85611210	LED-6IN,Luxbar
5	85611211	Clip-Bar,LED
6	85611216	Hood-LED,Shroud
7	85611218	Harness-Power,LED
8	85611233	Shroud-Motor, ASM, Routed
9	8112073	Screw-BHCS,#4-40 X 1/2 LG.



## 1300/1400/1500 Monitor Assembly

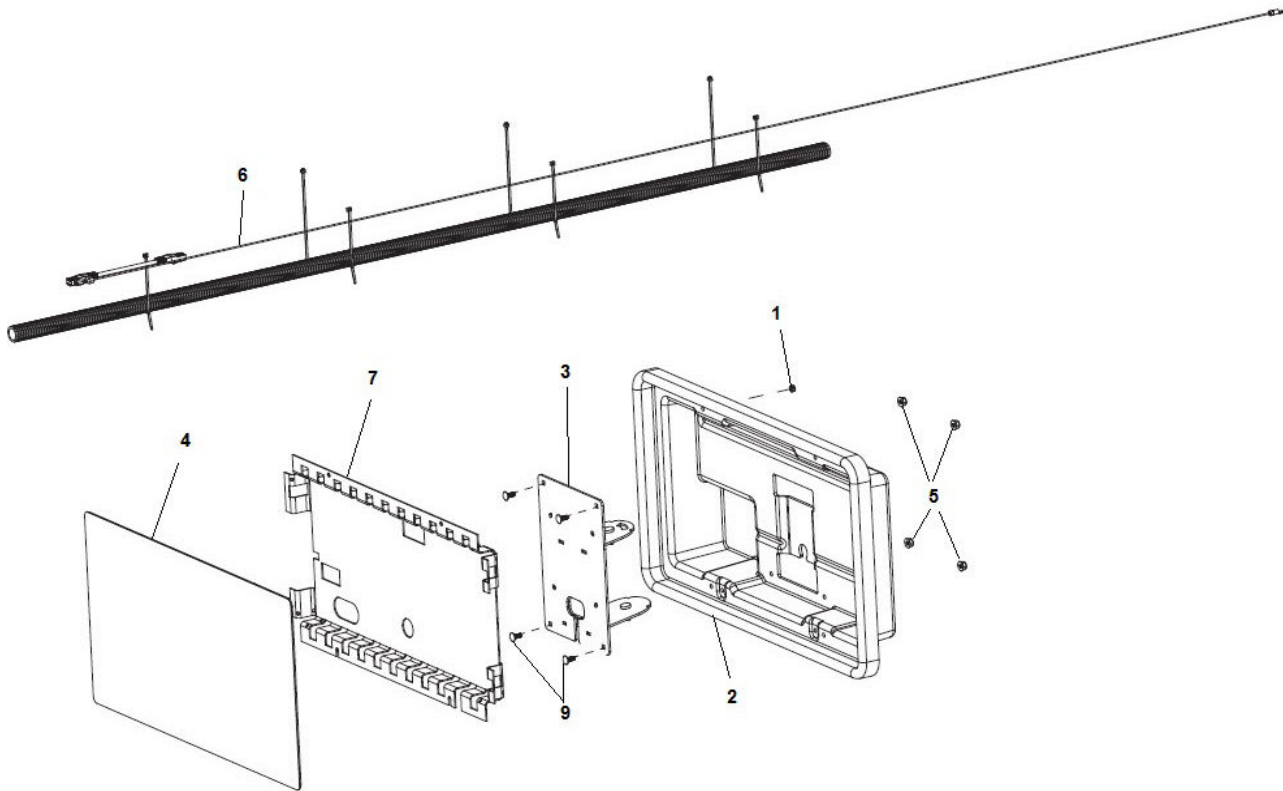

## 1600 Monitor Assembly

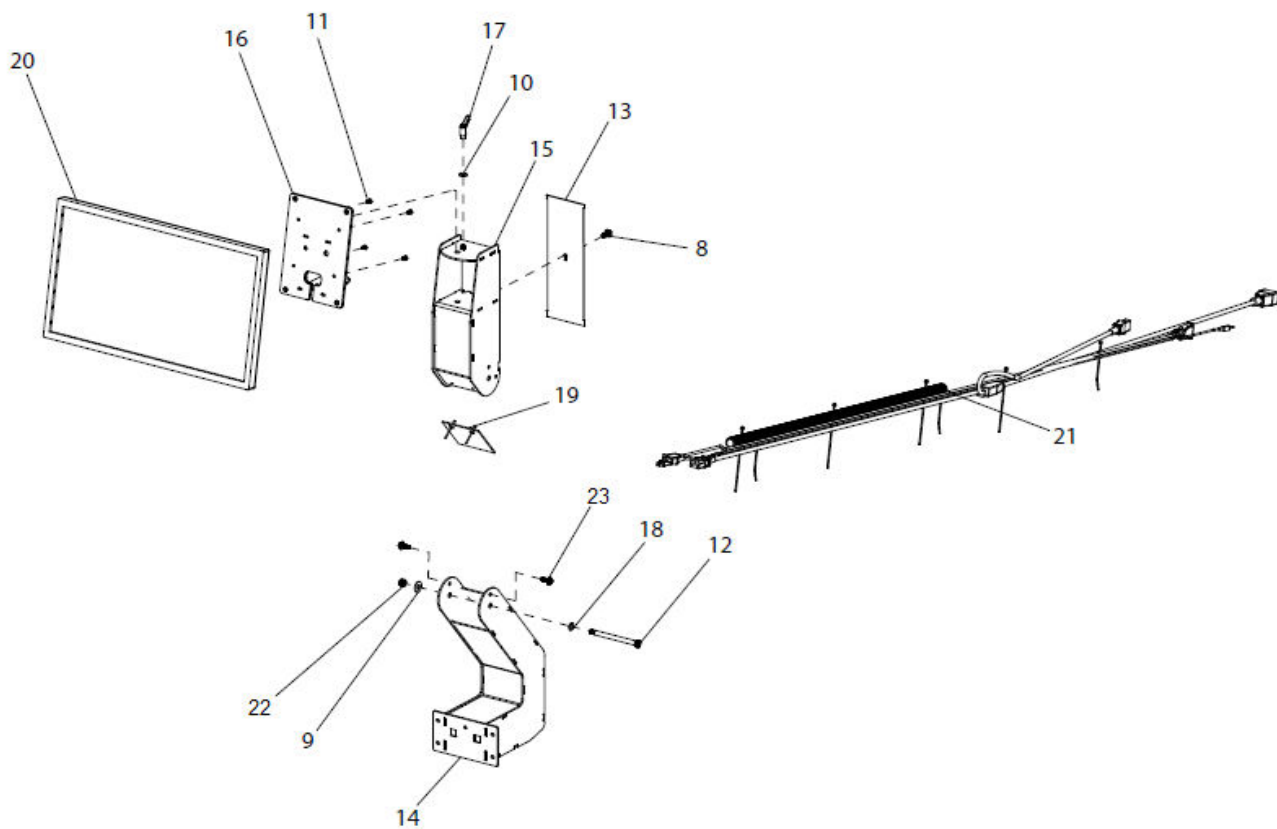


## 1300/1400/1500 Monitor Assembly

Item	Part No.	Description
1	8111055	Nut - Lock, W/Nylon Collar, #6-32
2	85610516	POD - Electronics
3	85610602	Wldmnt-Display Mount, Pvt Brkt
4	85610931	Assy-Panel, Tactile Touch (1300) (Includes PCB)
	85610896	<b>Panel</b> , Tactile Touch, <b>Only</b> (1300)
	85608097	<b>Board</b> -Panel,Touch, <b>Only</b> (1300)
	85610664	Assy-Panel, Tactile Touch (1400)
	85610663	<b>Panel</b> , Tactile Touch, <b>Only</b> (1400)
	85610624	Assy-Panel, Tactile Touch (1500)
	85610626	<b>Panel</b> , Tactile Touch, <b>Only</b> (1500)
5	85611520	Nut-Lock, #10-24, Nylon Insert
6	85610928	Assy-Cable, Tactile Panel (1300)
	85610629	Assy-Cable, Tactile Panel (1400/1500)
7	8113624	Shield - EMC (AUS Models only)
8	85610529	Mount-Cable, Snap-In, 8"
9	85611519	Bolt, Square-Neck Carriage, #10-24 x 0.5"

## 1600 Monitor Assembly

Item	Part No.	Description
9	8000745	Washer-Flat, 1/4"
10	8113921	Washer - Flat 1/4"
11	85607866	Screw-M4-07X10MM, Slotted Pan
12	85610288	Screw-Shoulder, 3/8 x 4
13	85610556	Plate-Pivot Backing
14	85610599	WLDMNT-Display Mount, Lower
15	85610601	WLDMNT-Display Mount, Upper
16	85610602	WLDMNT-Display Mount, Pvt Brkt
17	85610604	HANDLE-Display Mount, Locking
18	85610606	Washer-Fiber, 3/8" ID
19	85610607	Cover-Mat, 1/16" Rubber
20	85610608	Display-Viewsonic, 22" Touch
	85611176	Display-Viewsonic, 22" Capacitive
21	85610611	Cable-Asm, Display, Opt. Touch (for 85610608)
	85611170	Cable-Asm, Display, (for 85611168)
22	8000525	Nut-Hex, LK, 5/16-18
23	8106301	Screw-1/4-20 X .75


## 1300/1400 Non-Inverter Model

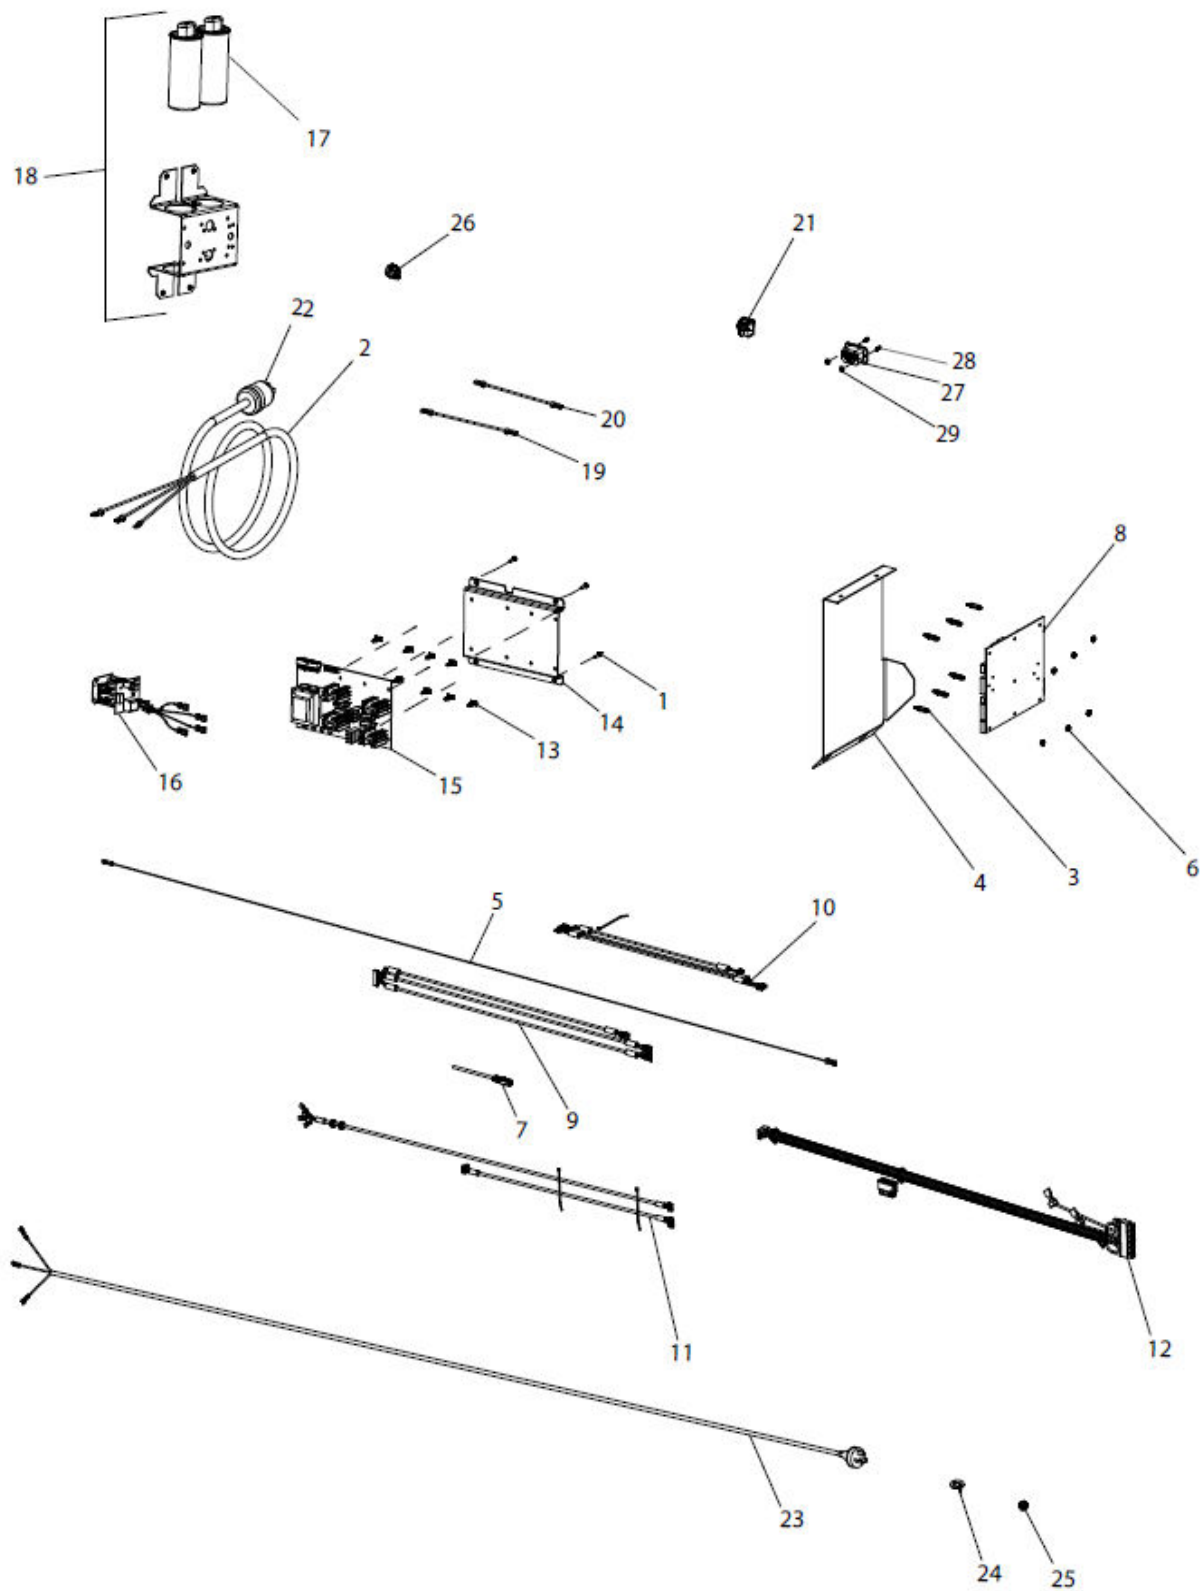

## 1300/1400 Non-Inverter Model

Item	Part No.	Description
1	8111542	Screw - 8-32 X 5/8 LG. Php Sem
2	85611137	Cord – Power
	8143127	Cord-Power 3 PH
3	8113996	Standoff - 8-32X3/4
4	8114184	Cover
5	8114212	Assembly, Drain Wire
6	8301084	Nut, #8-32 KEP
7	81142111	Cable - Cat 5, 7' LG.
8	85608097	PCB – Processor (1300 Only)
	85609809	PCB – Processor (1400 Only)
9	85609815	Assembly - Piezo Harness
10	85609818	Assembly, MCB Cable
11	85609868	Harness-Assy
12	85608188	Harness-Swtch,Hd,Assy
13	85000361	Standoff-Lck, Snp
14	85609308	Bracket-Mcb,Assy
15	85610543	Board-Asm,MCB,JST, 2D
16	85000705	Motor Module Assembly, 1 PH
	85000704	Motor Module Assembly, 3 PH
17	8112356	Capacitor
18	8111860	Capacity Panel Assembly
19	8309057	Wire-14AWG,RED,6",Assy
20	8309005	Wire-14AWG,BLCK,6",Assy
21	85609122	Switch-RCKR,DPST
22	8305076	220V, 1 PH Plug
	8140786	220V, 3 PH Plug
23	929507	Cord-Power, (Aust. Only)
24	929642	Adapter-Knckt, Heyco (Aust. Only)
25	929643	Relief-Strain,SR-6W-1 (Aust. Only)
26	906058	Relief-Strain,120V,SR-81-1
27	85609290	Outlet, Panel Mount
28	85610253	Screw, OHPMS, 6-32 x ½
29	8111055	Nut - Hex, locking, 6-32 Insert

## 1500/1600 Inverter Models

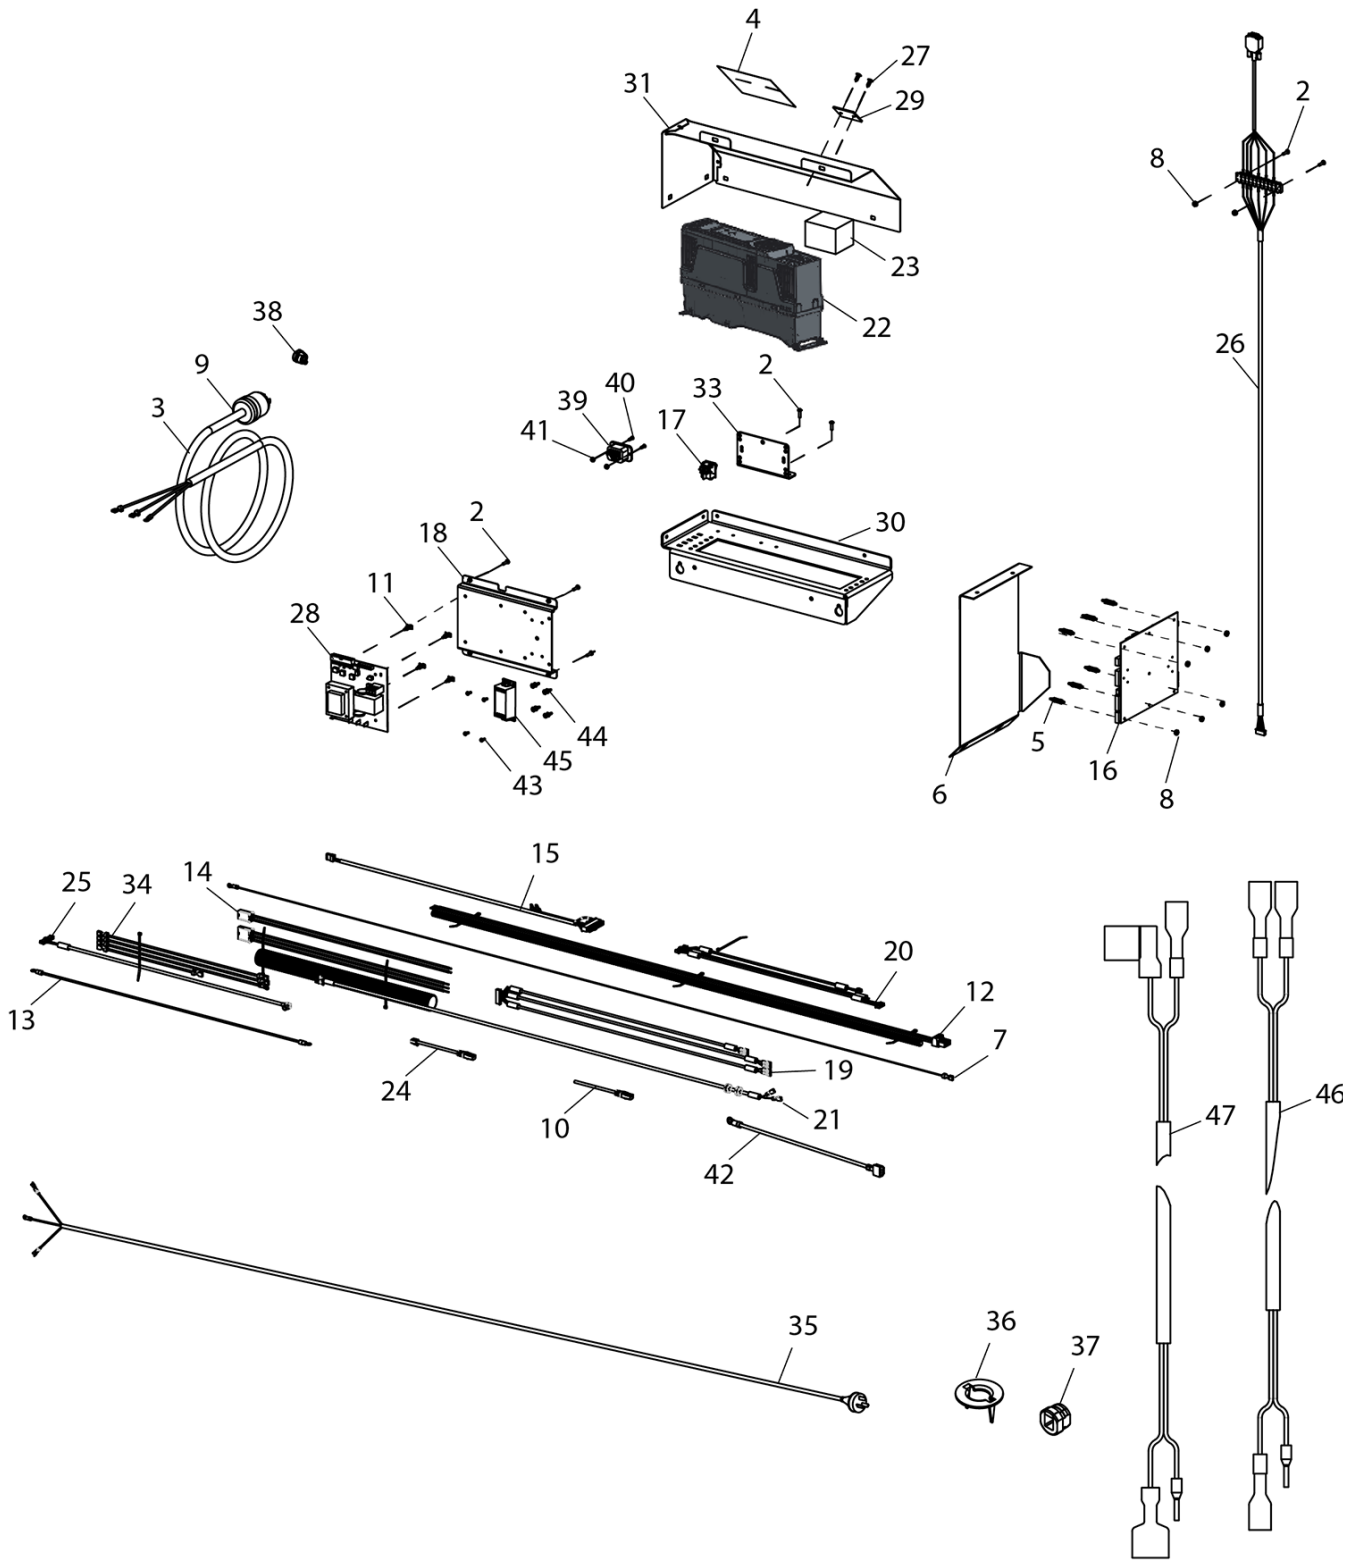



## 1500/1600 Inverter Models

Item	Part No.	Description
1	925019	Screw - Hex Hd. Self Tapping
2	8111542	Screw - 8-32 X 5/8 LG. Php Sem
3	85611137	Cord - Power 1 PH
	8143127	Cord - Power 3 PH
4	8113927	Decal-Caution/Warning
5	8113996	Standoff - 8-32X3/4
6	8114184	Cover
7	8114212	Assembly, Drain Wire
8	8301084	Nut, #8-32 Kep
9	8305076	Plug-Twist Lock,250V,20AMP,1PH
	8140786	Plug-Twist Lock,220V,20AMP,3PH
10	81142111	Cable - CAT 5, 7' LG.
11	85000361	Standoff- Snap-Lock
12	85010022	Assy - Wire Harness, Motor
13	85010024	Assy - Wire, Ground X 26' LG.
14	85600284	Harness - Inverter / Motor
15	85608188	Harness-Fan 220V,Assy
16	85609808	PCB - Processor (1500)
	85608629	PCB - Processor (1600)
17	85609122	Switch-DPST, Rocker
18	85609308	Bracket-MCB Assy
19	85609815	Assembly - Piezo Harness
20	85609818	Assembly, MCB Cable
21	85609820	Assy, Hood Switch Cable
22	85609942	Inverter-Emerson 701, 3HP
23	85610071	Damper, Vibration, Inverter
24	85610107	Cable-RJ45 - RJ12 Assy
25	85610232	Cable, Sonar Chassis (1500 only)
	85611014	Cable, Sonar Chassis, Pedal (1600 only)
26	85610237	Cable-Emrsn,W/Trmnl,Assy
27	85610274	Rivet-Plastic, A3/16"
28	85610527	Board-Supply,Power,Inverter
29	85610588	Shield-Acrylic, IB Laser
30	85610644	Bracket-Inverter, Reverse
31	85610645	Weldment-Cover, WND
33	85610649	Bracket-Terminal Strip, Side
34	85610672	Harness-Asm,Pwr, 4X 14AWG
35	929507	Cord-Power, (Aust. Only)
36	929642	Adapter-Knckt,Heyco (Aust. Only)
37	929643	Relief-Strain,SR-6W-1 (Aust. Only)
38	929643	Relief-Strain,120V,SR-81-1
39	85609290	Outlet, Panel Mount
40	85610253	Screw, OHPMS, 6-32 x 1/2
41	8111055	Nut - Hex, locking, 6-32 Insert
42	85610727	Ground Wire
43	8301067	Screw- #6-32 X Phil. (1600 with LED Bar Only)
44	85611225	Spacer-Snap-In,ML/FML (1600 with LED Bar Only)
45	85611226	Supply-Pwr, 220VAC/24VDC (1600 with LED Bar Only)
46	85611222	Harness-Pwr,Switch, 48"
47	85611223	Harness-Pwr,LED, 48"

